

PLANET APPLIQUE PRESENTS



3D PUMPKIN

COPYRIGHT © PLANET APPLIQUE INC. ALL RIGHTS RESERVED.

Find Supplies

Need help finding supplies for this in the hoop project? We've put together a **little shopping list** of our favorite finds on Amazon.



A FAMILY BUSINESS

“ A Big Thank You for supporting our small family business. We all work hard to engineer projects that inspire you to do more with your embroidery machine. ”



You are invited to join our
private Facebook Group!

JOIN GROUP

- Share Your Creations
- Ask Questions
- Learn from Others
- Special Announcements
- Get Inspiration from Others



Supplies



EMBROIDERY
MACHINE



TEARAWAY
STABILIZER



SCISSORS



SCOTCH TAPE



NEEDLE AND
THREAD



SPRAY ADHESIVE



RUBBER PIN BACKS



COTTON FABRIC



PINKING SHEARS



UPHOLSTERY
THREAD



HEAT N BOND LITE



DOLL JOINT-OPT



POLYFIL






5" DOLL NEEDLE





JERSEY FABRIC

FOR 4X4 AND 5X5 YOU CAN USE 10MM SAFETY EYE. FOR 5X7 AND 8X8 USE A 20MM DOLL JOINT. FOR 6X10 USE A 30MM DOLL JOINT. FOR 8X12 USE 35MM. FOR 10X14 USE 35MM. FOR 11X18 USE 45MM




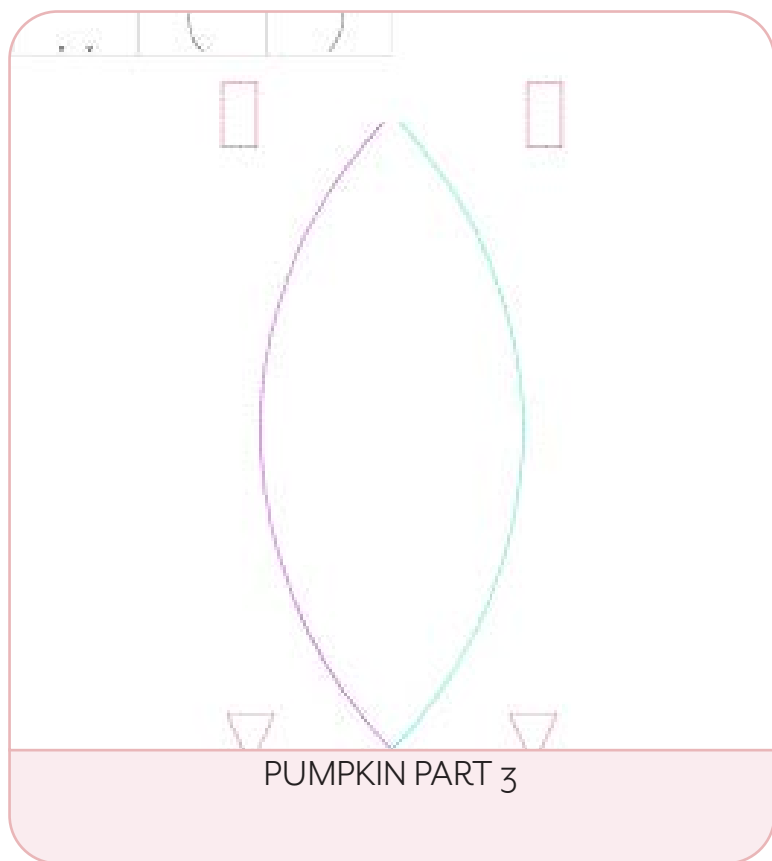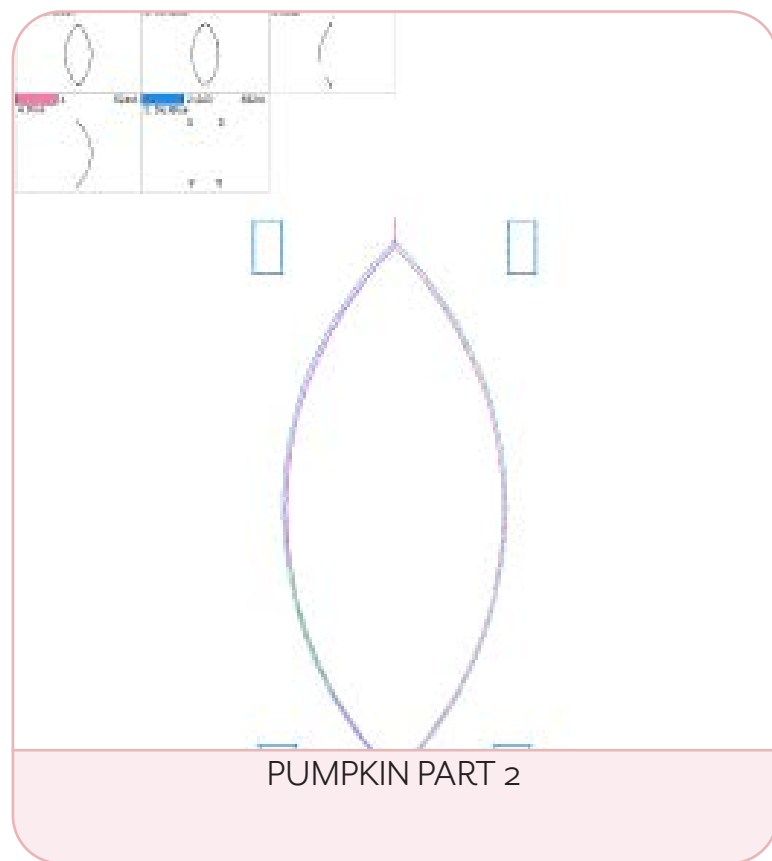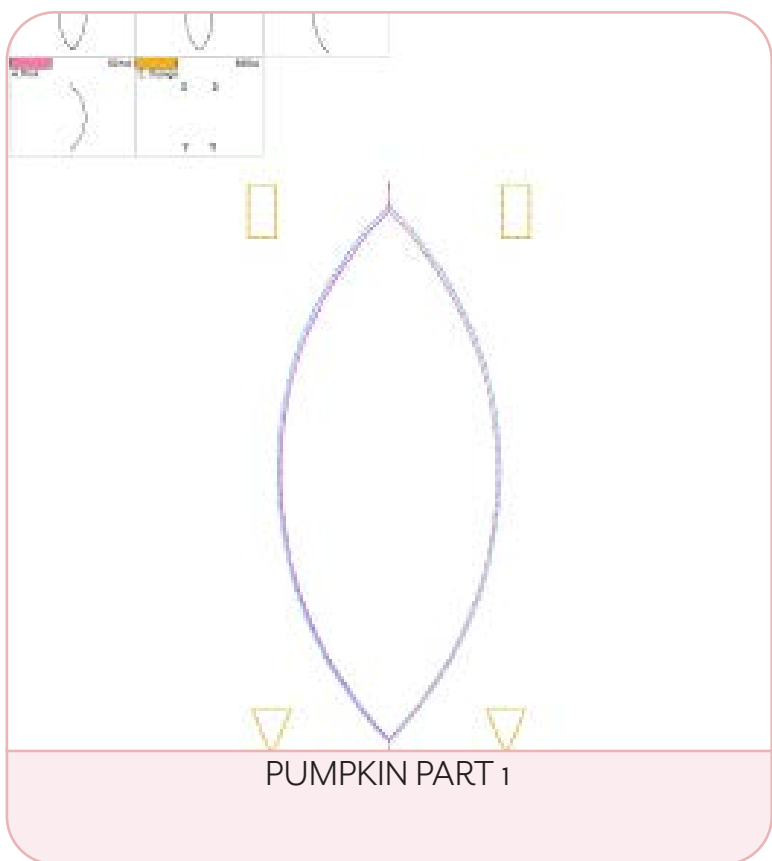

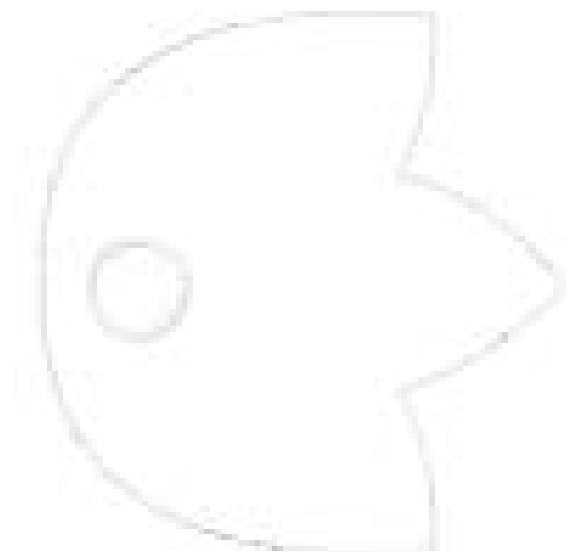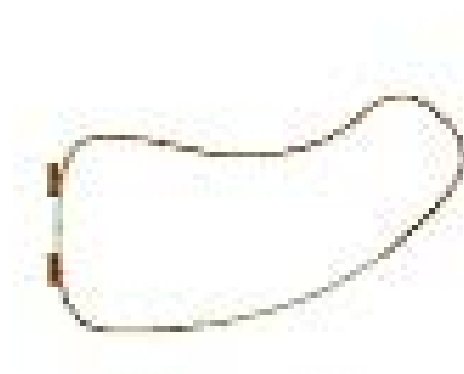

LOAD THE STEM AND LEAF FILE



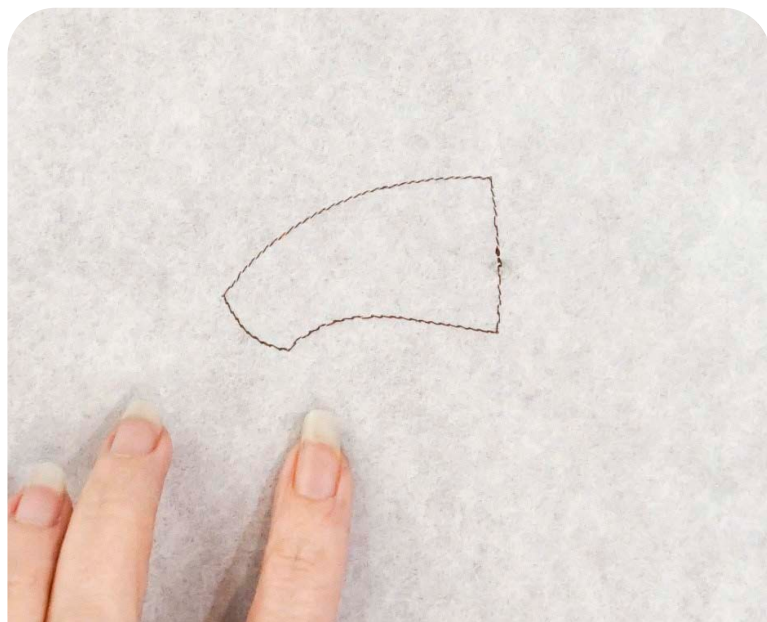


STITCH THE PLACEMENT LINES ON A NEW PIECE OF TEARAWAY STABILIZER.



CUT TWO PIECES OF FABRIC TO GENEROUSLY COVER THE OUTLINE. USE STRETCHY FABRIC LIKE JERSEY, MINKY, FLEECE OR MOCHI. (SPANDEX, STRETCH VELVET)




COVER THE OUTLINE WITH BOTH FABRIC PIECES RIGHT SIDE TOGETHER.

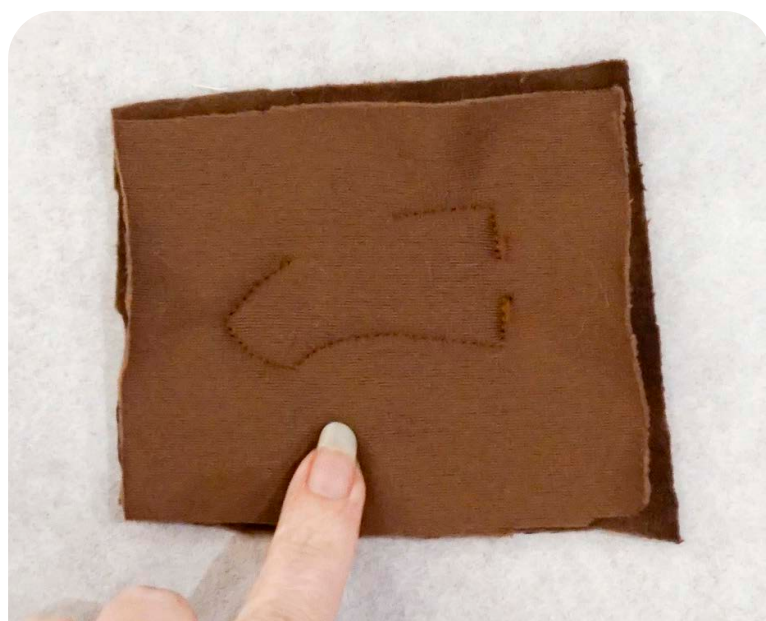

STITCH THE TACK DOWN LINE



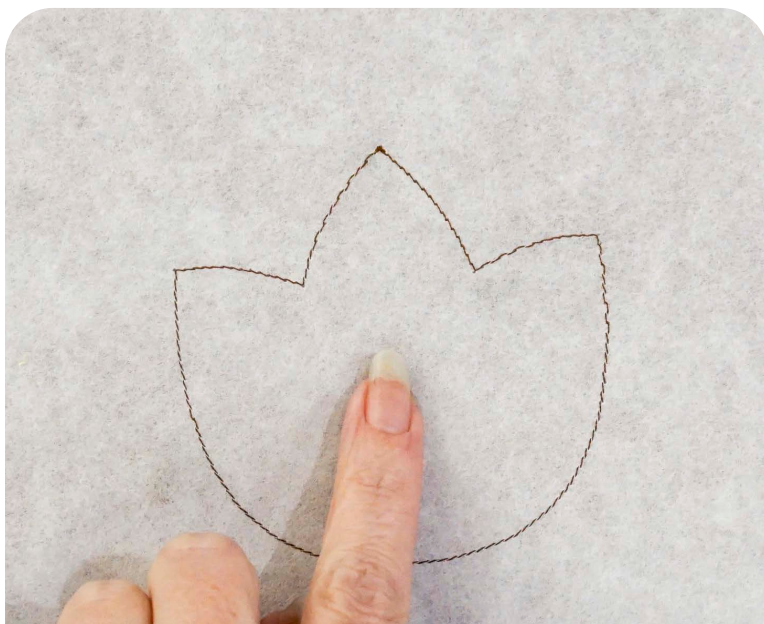

STITCH THE OUTLINE FOR THE LEAF



CUT TWO PIECES OF FABRIC AND ONE PIECE OF HEAT N BOND LITE TO GENEROUSLY COVER THE OUTLINE.



PLACE THE HEAT N BOND LITE ON THE WRONG SIDE OF ONE PIECE OF FABRIC. IRON.




PEEL OFF THE PAPER BACKING.





PLACE THE SECOND PIECE OF FABRIC WRONG SIDE DOWN ON TOP. AND IRON.

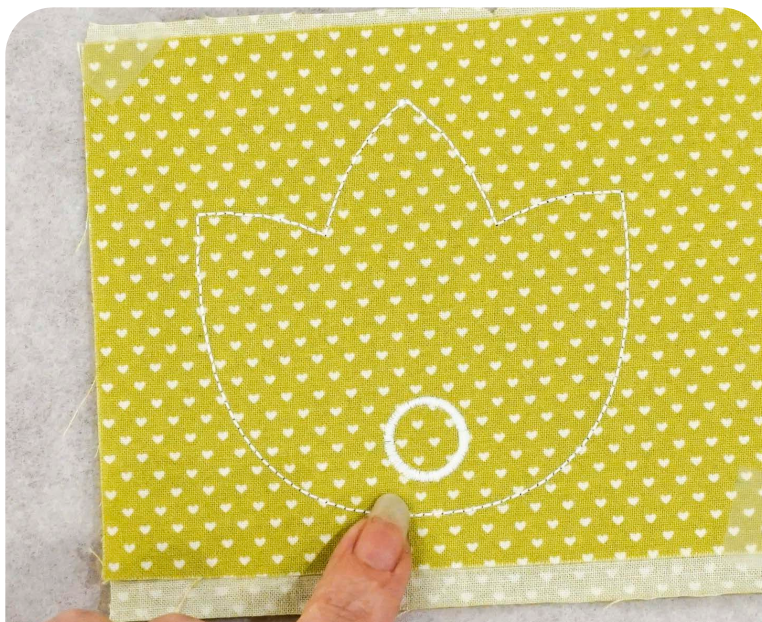

COVER THE OUTLINE WITH THE FABRIC SANDWICH AND STITCH THE TACK DOWN LINE AND SUPPORT CIRCLE.





REMOVE FROM THE STABILIZER AND TRIM AROUND THE PERIMETER ABOUT 2MM FROM THE TACK DOWN LINE.




CUT A SLIT IN THE SUPPORT CIRCLE.



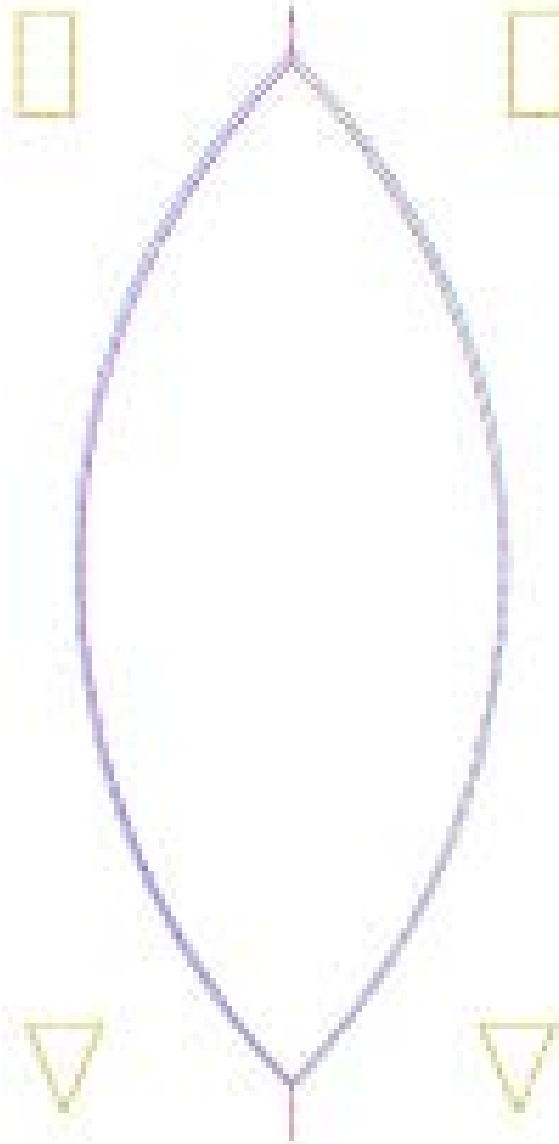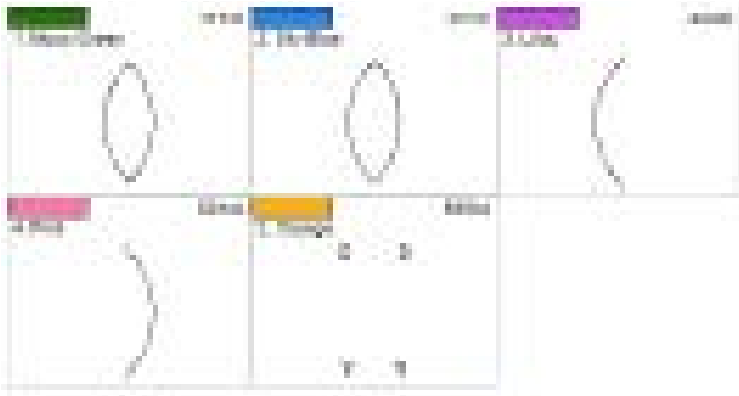


LOAD PUMPKIN PART 1




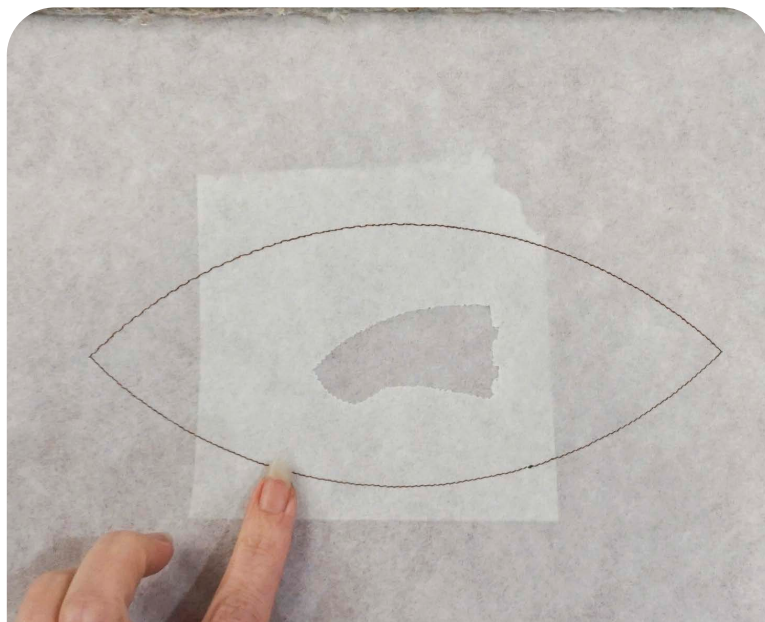


STITCH THE PLACEMENT LINES ON A NEW PIECE OF TEARAWAY STABILIZER.

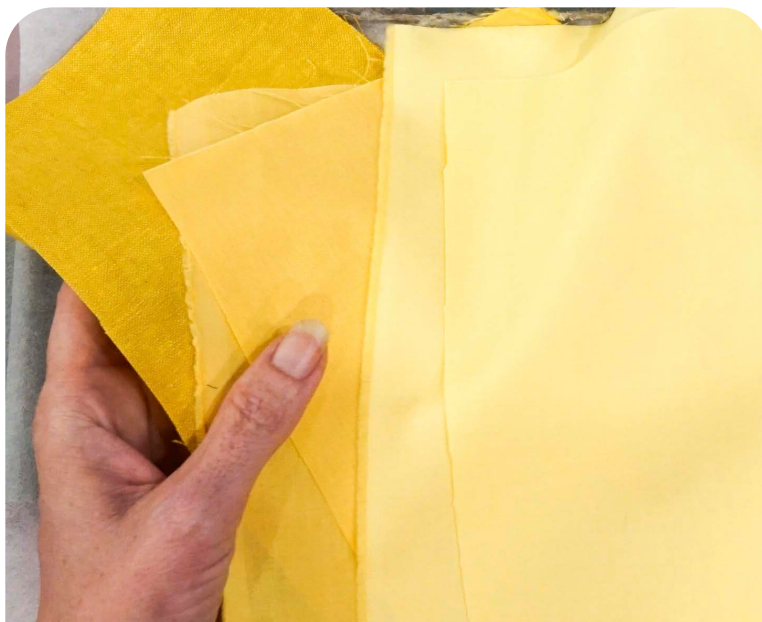

CUT 6 PIECES OF FABRIC TO GENEROUSLY COVER THE OUTLINE

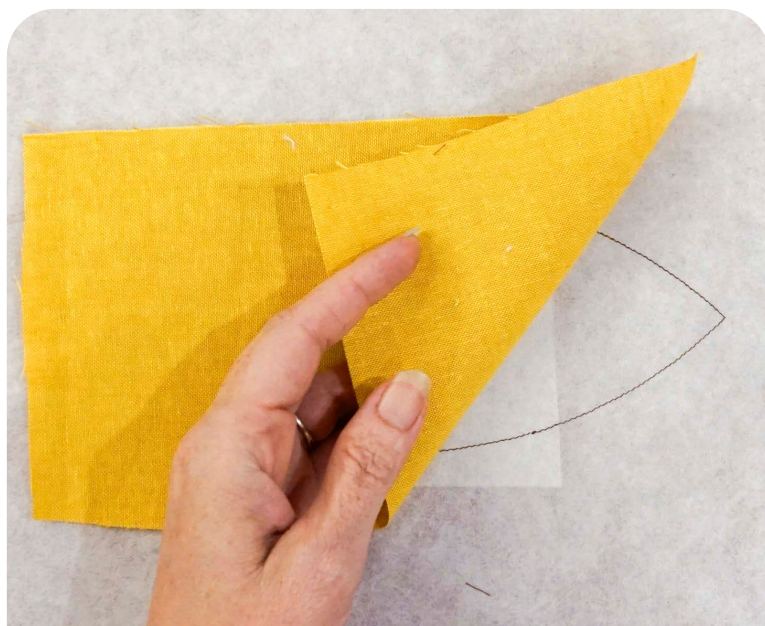

PLACE ONE PIECE OF FABRIC RIGHT SIDE UP OVER THE OUTLINE. TAPE IN PLACE.

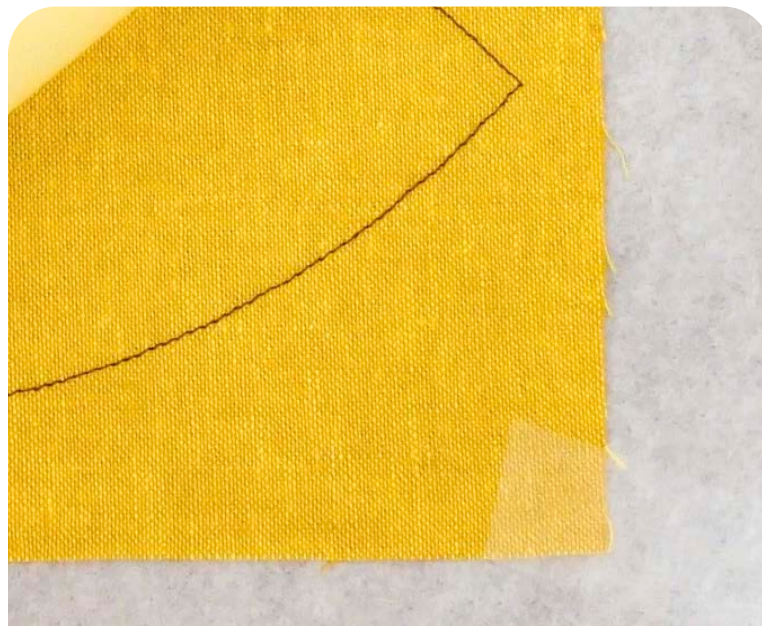

STITCH THE TACK DOWN LINE.





TAKE ANOTHER PIECE OF FABRIC



PLACE IT RIGHT SIDE DOWN SO IT OVERLAP THIS SIDE OF THE WEDGE BY 1/2" AS SHOWN. TAPE IN PLACE.



STITCH THE TACK DOWN LINE. TRIM THE FABRIC ALONG THE SEAM AS SHOWN.



UNFOLD THE TOP LAYER OF FABRIC AND SMOOTH IT FLAT. TAPE IN PLACE.






TAKE ANOTHER PIECE OF FABRIC



PLACE IT RIGHT SIDE DOWN SO IT OVERLAP THIS SIDE OF THE WEDGE BY 1/2" AS SHOWN. TAPE IN PLACE.

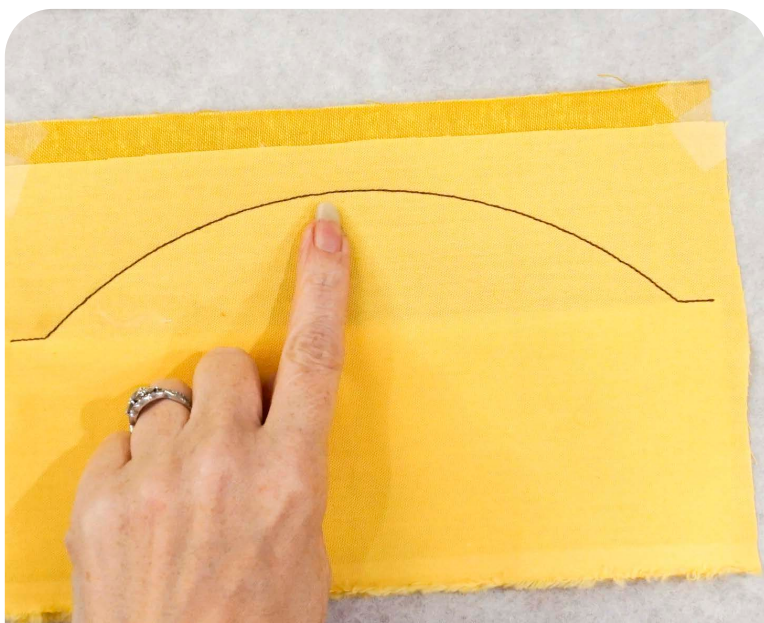

STITCH THE TACK DOWN LINE.




TRIM THE FABRIC ALONG THE SEAM AS SHOWN.





UNFOLD THE TOP LAYER OF FABRIC AND SMOOTH IT FLAT. TAPE IN PLACE.

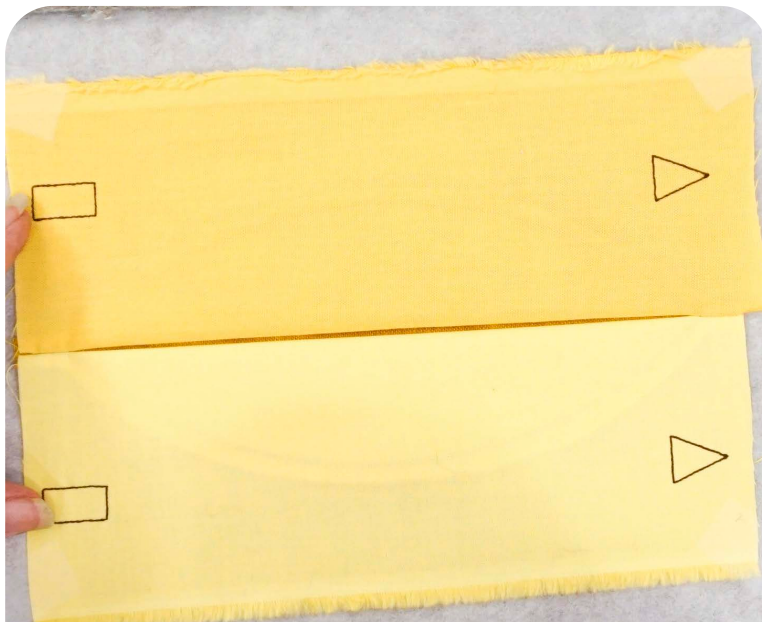


STITCH THE ALIGNMENT MARKINGS.



REMOVE FROM THE STABILIZER. TRY TO LEAVE THE STABILIZER IN THE CENTER WEDGE SHAPE



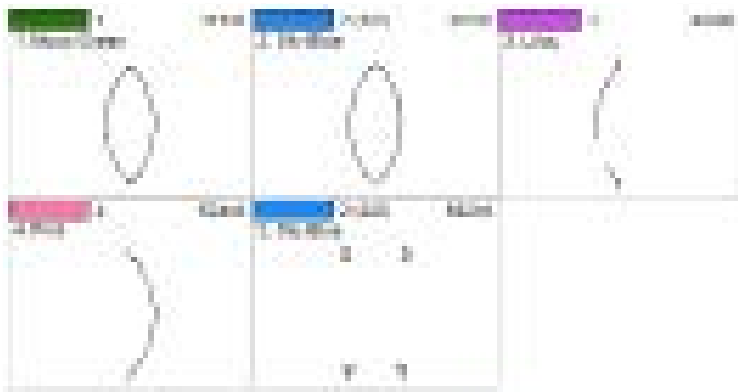

LOAD PUMPKIN PART 2. THIS PART IS MADE EXACTLY THE SAME AS PART 1





STITCH THE PLACEMENT LINES ON A NEW PIECE OF TEARAWAY STABILIZER. FOLLOW THE TUTORIAL FOR HOW PART 1 WAS MADE TO MAKE PART 2.



STITCH THE TACK DOWN LINE. THERE WILL BE A GAP IN THIS ONE. COLOR 3.




TRIM THE FABRIC ALONG THE SEAM AS SHOWN. MAKE SURE YOU LEAVE A TAB OF FABRIC AS SHOWN AT THE GAP.




COMPLETE PART 2 LIKE SHOWN IN PART 1. REMOVE FROM THE STABILIZER.



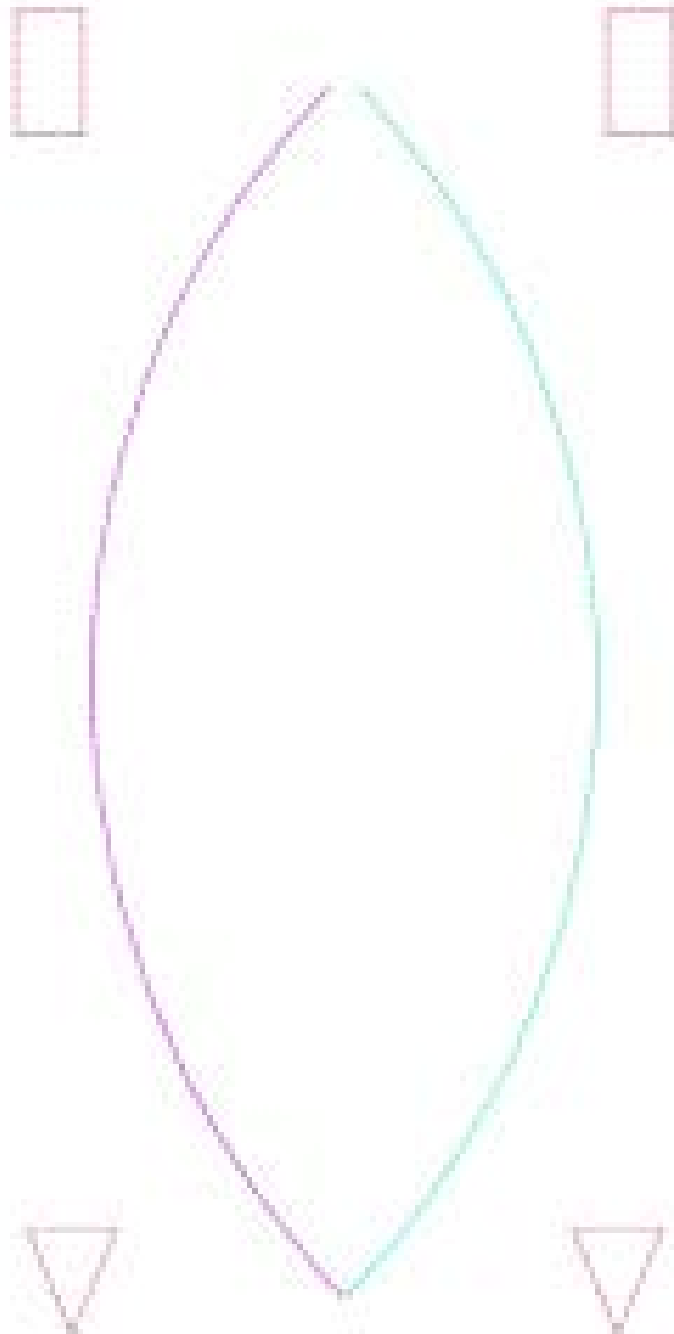


LOAD PUMPKIN PART 3




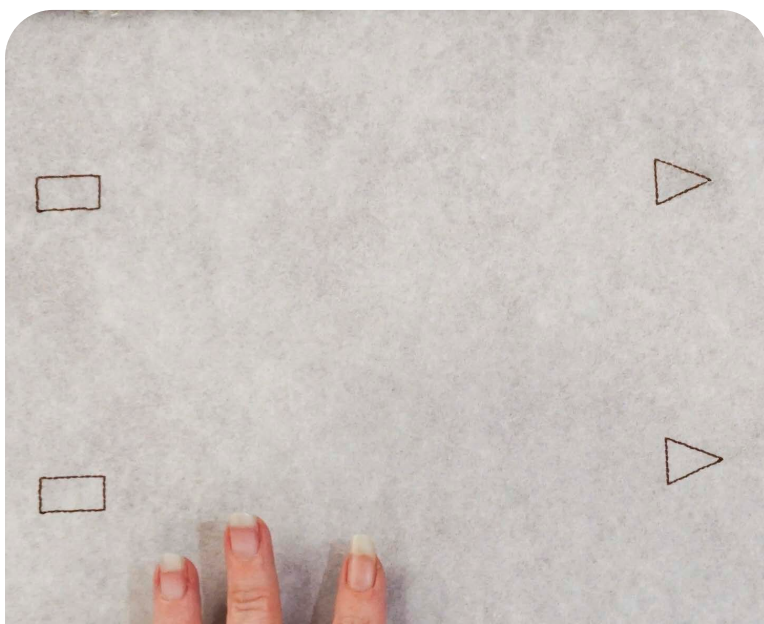


STITCH THE ALIGNMENT MARKINGS ON A NEW
PIECE OF TEARAWAY STABILIZER.

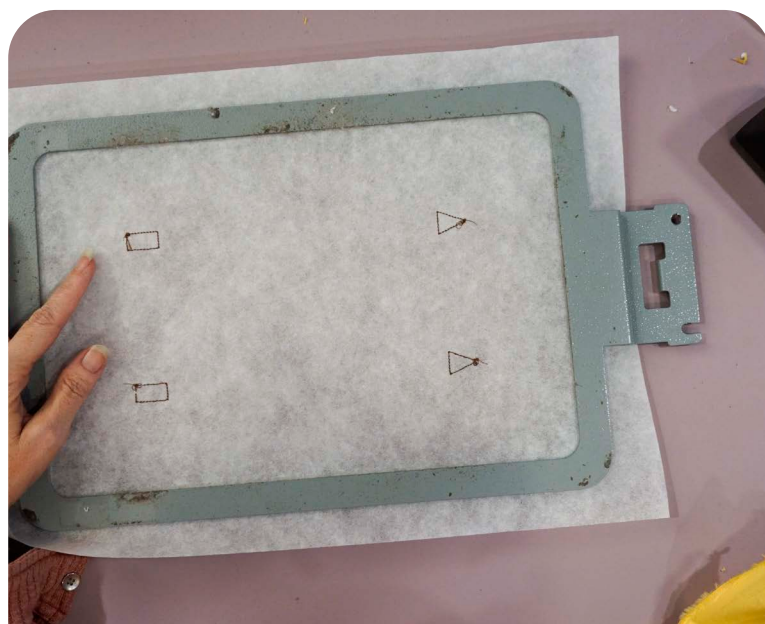

FLIP THE HOOP TO THE BACKSIDE.

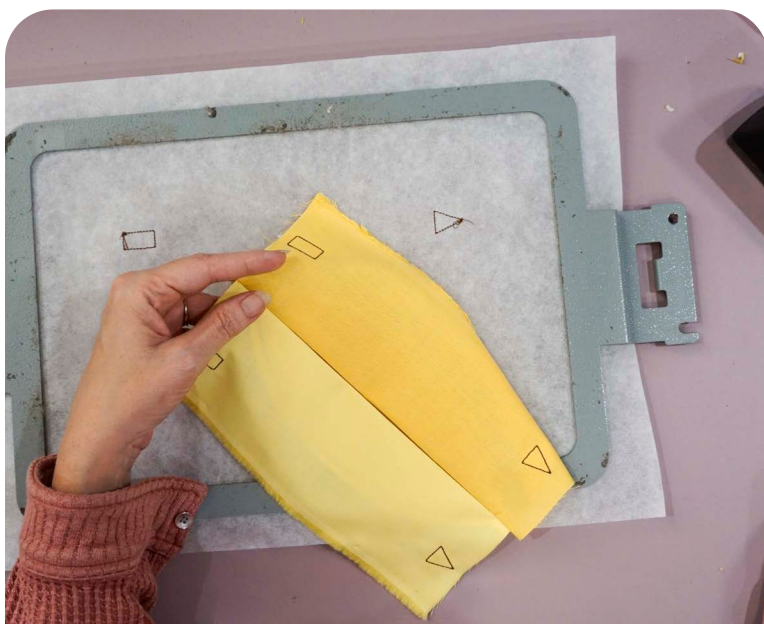


TAKE ONE OF THE PANELS...

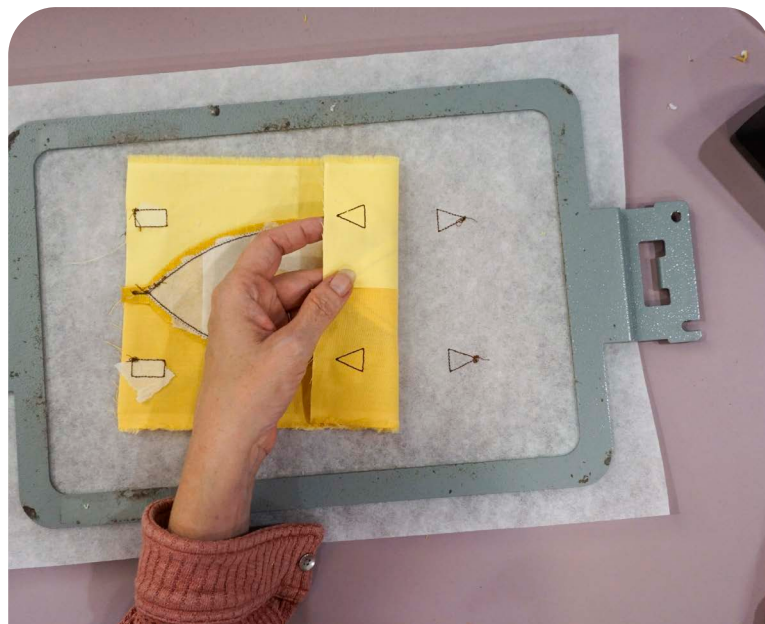

AND PLACE IT RIGHT SIDE DOWN TO ALIGN THE
MARKINGS.




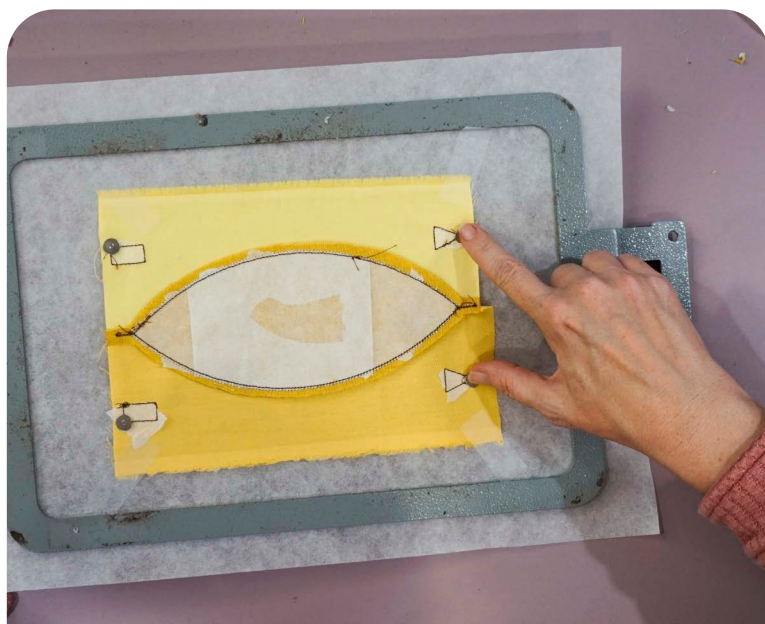

USE RUBBER PIN TACKS TO PERFECTLY ALIGN THE PANEL. OR YOU CAN USE TAPE.



FLIP THE HOOP BACK OVER TO THE FRONT SIDE. ALIGN THE SECOND PANEL OF FABRIC AS SHOWN.

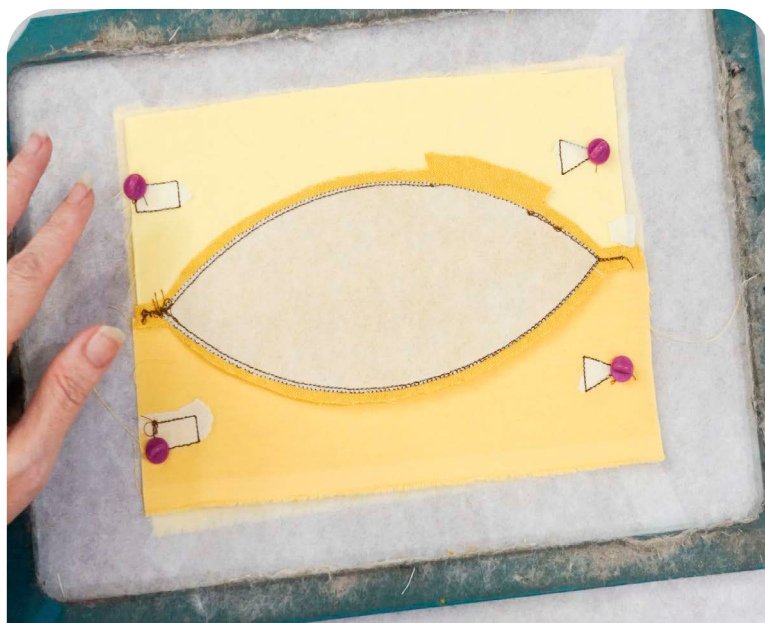


HERE IS EVERYTHING ALIGNED AND PINNED.




ON THE TOP SIDE OF THE HOOP...FLIP THE EDGE FLAP TO THIS SIDE AND PIN IN PLACE.



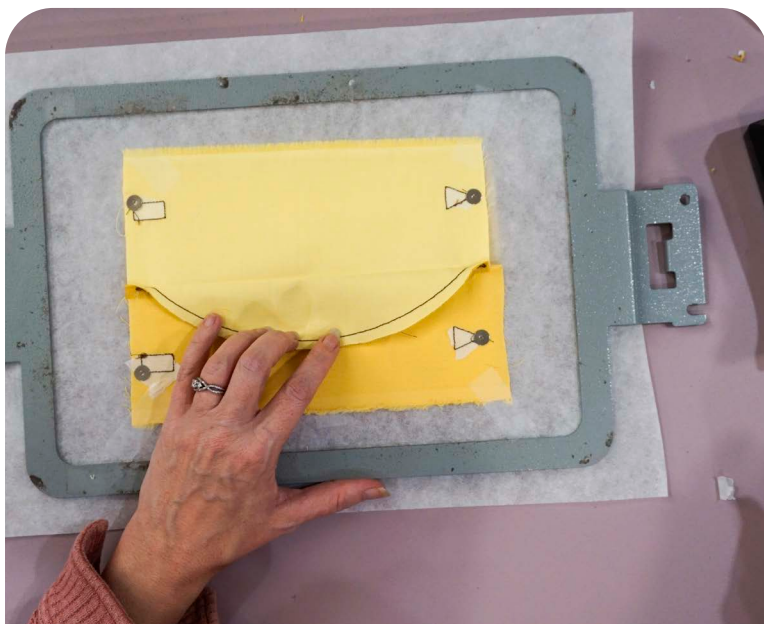


ON THE BACK SIDE OF THE HOOP...FLIP THE
EDGE FLAP TO THIS SIDE AND PIN IN PLACE. (IT
SHOULD BE ON THE SAME SIDE AS THE FLAP ON
THE FRONT SIDE)

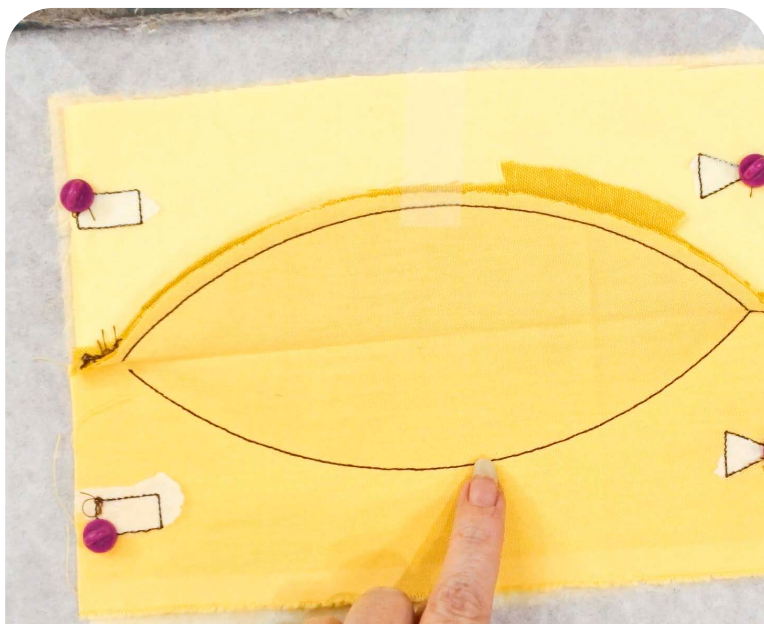

STITCH THE TACK DOWN LINE.




FLIP THE WEDGE FLAP TO THIS SIDE AND TAPE IN
PLACE.

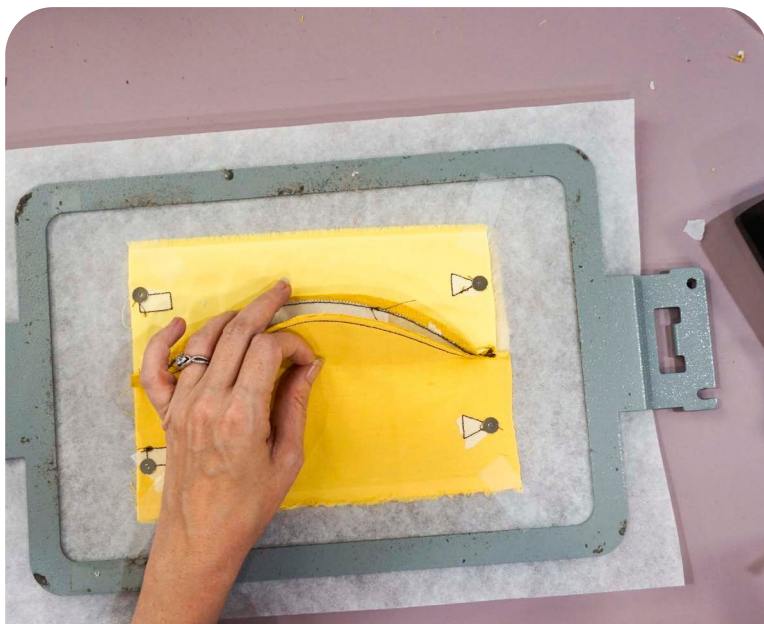

ON THE BACKSIDE OF THE HOOP, FLIP THE
WEDGE FLAP TO THIS SIDE AND TAPE IN PLACE.



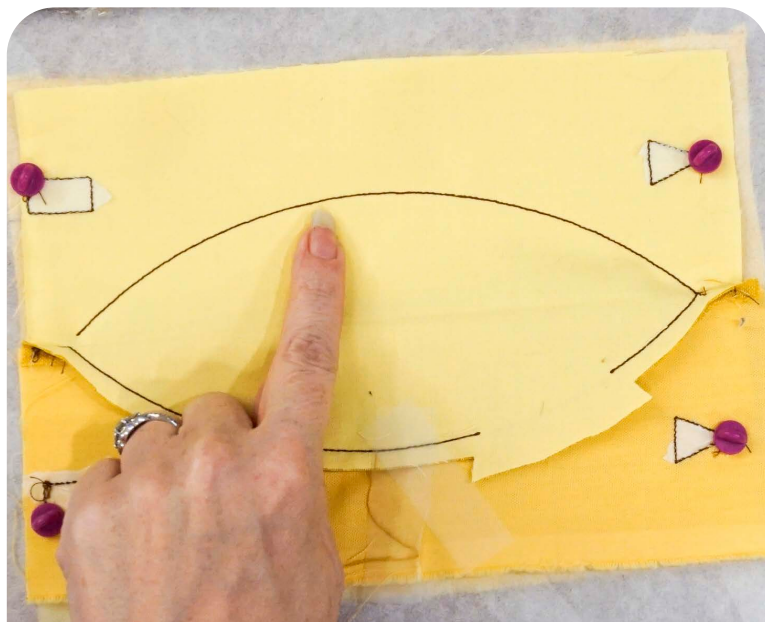

STITCH THE TACK DOWN LINE.



REMOVE THE PUMPKIN



TRIM THE EXCESS FABRIC ALONG ONE SIDE....
BEING CAREFUL NOT TO CUT OTHER LAYERS.



AND THEN THE OTHER SIDE.






REMOVE THE REST OF THE STABILIZER.



TURN THE PUMPKIN RIGHT SIDE OUT.

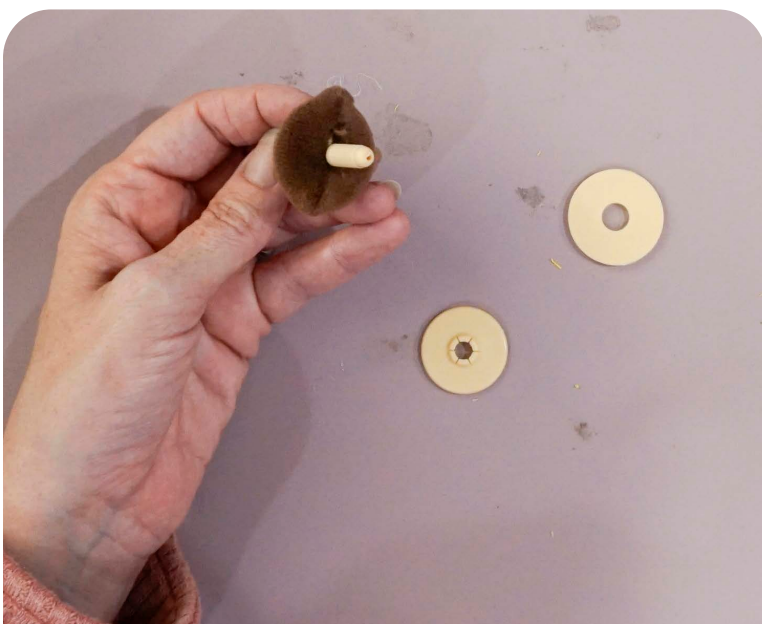

OPTIONAL: INSERT A DOLL JONIT OR SAFTEY EYE INTO THE STEM. THE POST SHOULD PROTUDE. YOU CAN ALSO ALTERNATIVELY LADDER STITCH THE STEM ON LATER.



PLACE THE LEAF ONTO THE POST AND....(IGNORE THE STUFFED PUMPKIN)






THEN PUSH THE POST INTO THE PUMPKIN AT THE TOP WHERE YOU WILL FIND A SMALL OPENING



REACH INSIDE THE PUMPKIN, FEEL FOR THE POST, AND SECURE THE DOLL JOINT WITH A FLAT WASHER AND LOCKING DISK. SNAP TIGHTLY.



STUFF THE STEM AND THE PUMPKIN.

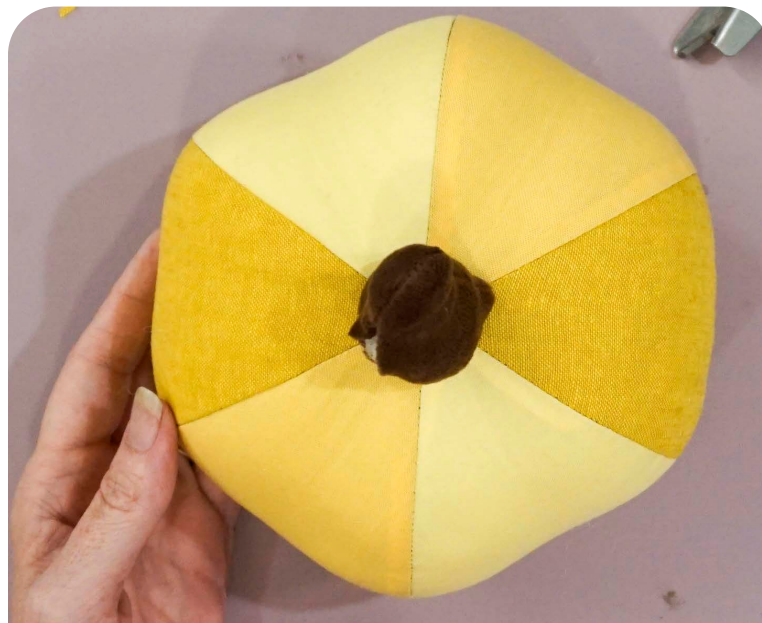


ITS EASIER TO STUFF THE STEM FIRST AND LADDER STITCH IT SHUT BEFORE YOU STUFF THE PUMPKIN. THEN STUFF THE PUMPKIN ABOUT 80-90% FULL.






WITH A DOLL NEEDLE AND UPHOLSTERY THREAD, TAKE A SMALL STITCH UNDER THE STEM IN THE CENTER OF ONE OF THE SECTIONS OF THE PUMPKIN.

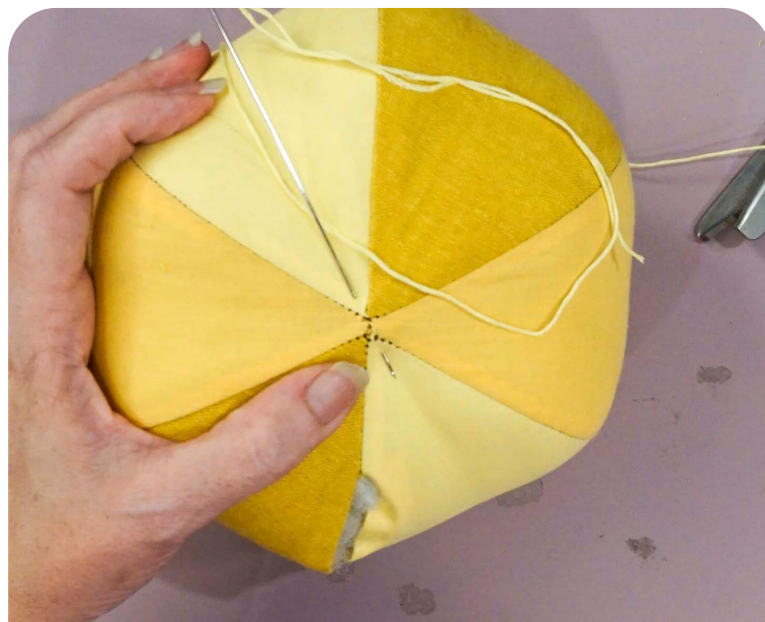

GO TO THE BOTTOM OF THE PUMPKIN AND TAKE A STITCH HERE AS SHOWN INTO THE OPPOSITE FACING SECTION OF THE PUMPKIN.

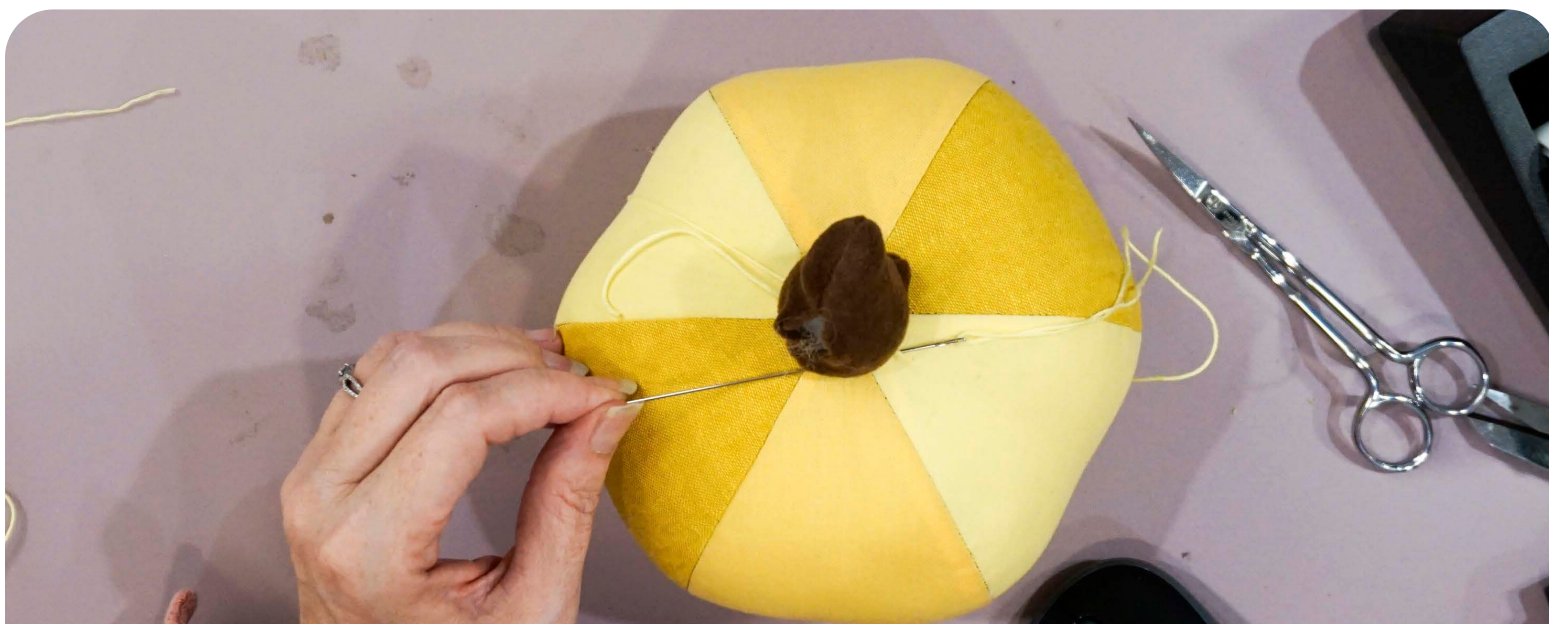

THEN GO BACK TO THE TOP OF THE PUMPKIN AND TAKE A STITCH IN THE TOP CENTER OF THE OPPOSITE SECTION OF THE PUMPKIN JUST UNDER THE STEM.





CINCH THE THREAD AND TIE A KNOT. YOU CAN PUSH DOWN ON THE PUMPKIN TO CINCH IT BETTER. TIE A KNOT AROUND THE DOLL JOINT POST AND BURY THE TAILS



REPEAT FOR THE OTHER TWO PAIRS OF SECTIONS AND YOU ARE ALL DONE! ADD A BEAUTIFUL BOW AND SET OUT FOR FALL DECOR!

