

PLANET APPLIQUE PRESENTS



COIN AND CARD WALLET

COPYRIGHT © PLANET APPLIQUE INC. ALL RIGHTS RESERVED.



Find Supplies

Need help finding supplies for this in the hoop project? We've put together a **little shopping list** of our favorite finds on Amazon.



A FAMILY BUSINESS

“ A Big Thank You for supporting our small family business. We all work hard to engineer projects that inspire you to do more with your embroidery machine. ”



You are invited to join our private Facebook Group!

- Share Your Creations
- Ask Questions
- Learn from Others
- Special Announcements
- Get Inspiration from Others

JOIN GROUP



Supplies



EMBROIDERY
MACHINE



TEARAWAY &
NO SHOW MESH
STABILIZER



SCISSORS



SCOTCH TAPE



NEEDLE AND
THREAD



SPRAY ADHESIVE



ADHESIVE SEAM
TAPE



IRON



RUBBER PIN BACKS



COTTON FABRIC



KAM SNAPS




PINKING SHEARS



ZIPPER



RIBBON

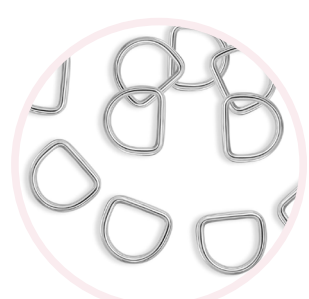


D-RING

PRECUT FABRIC FOR THIS PROJECT ARE 2 PIECES OF COTTON FABRIC 6" WIDE X 14" LONG.






COIN AND CARD WALLET

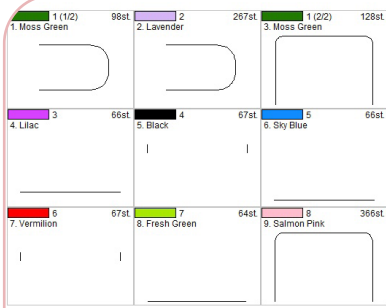

WALLET PART 1


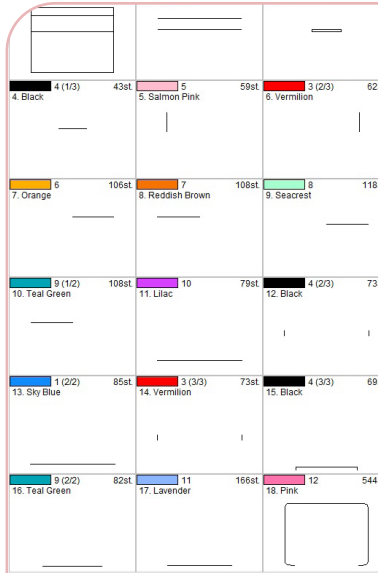


WALLET PART 2






COIN AND CARD WALLET

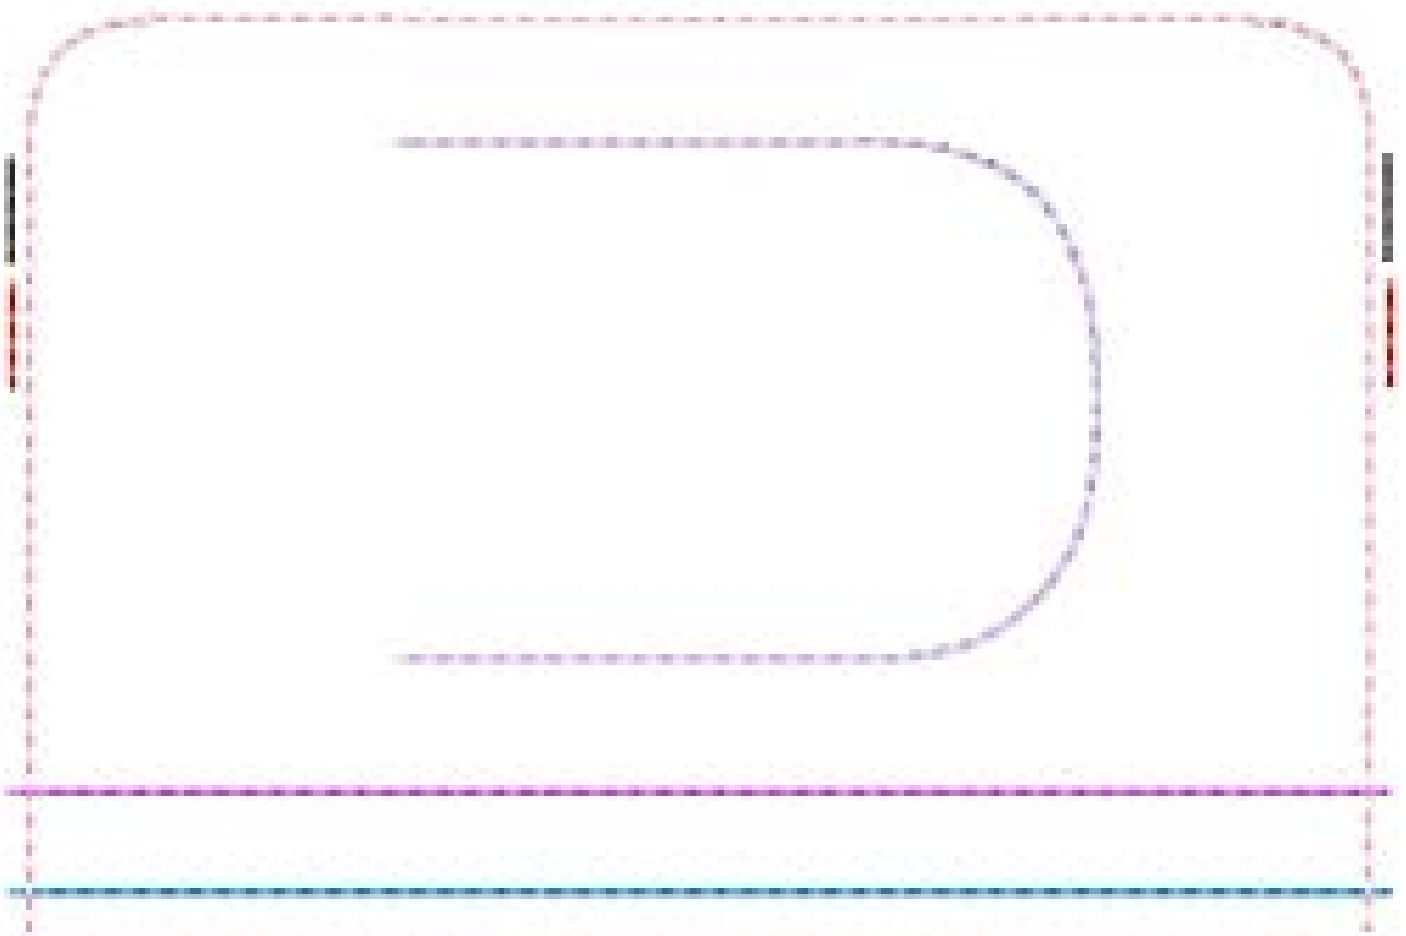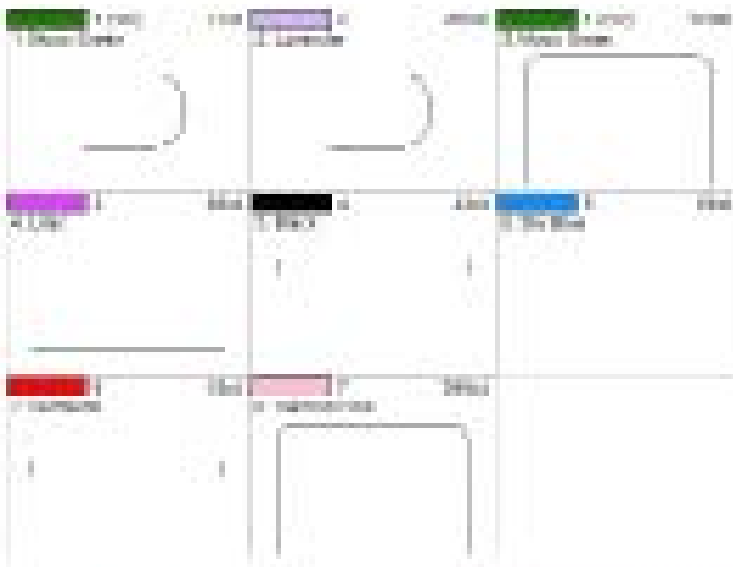

LOAD PART 1 OF THE WALLET




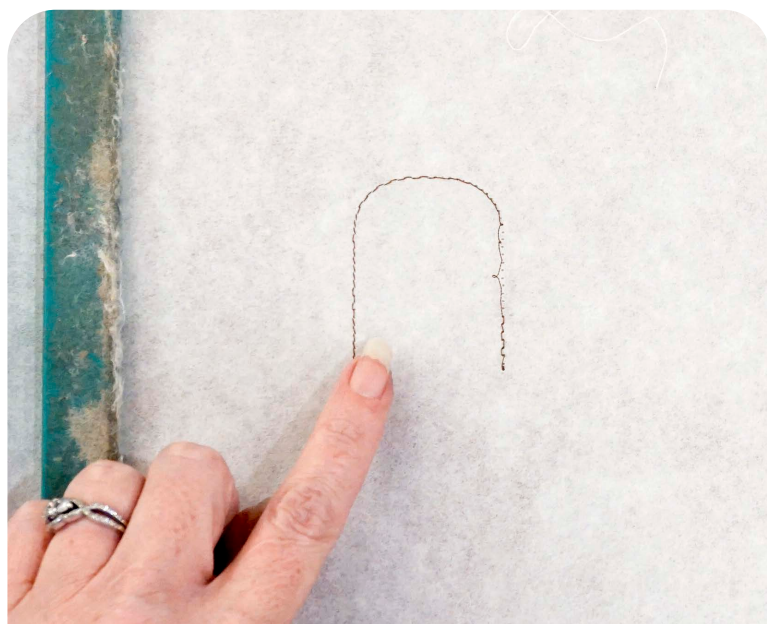

STITCH THE PLACEMENT LINES ON A NEW PIECE OF TEARAWAY STABILIZER.



CUT TWO PIECES OF FABRIC TO GENEROUSLY COVER THE OUTLINE. OPTIONAL: YOU CAN ALSO CUT A PIECE A HEAT N BOND LITE OR SF101 AS WELL.

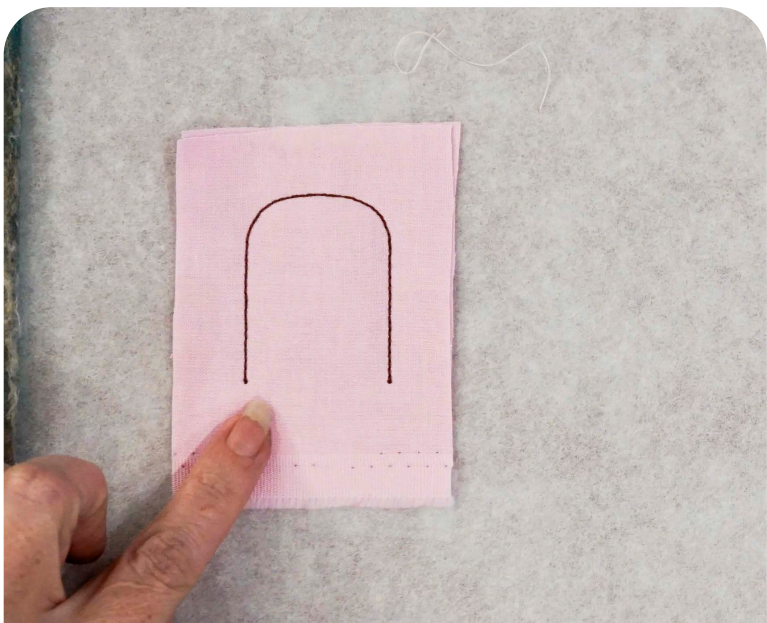


COVER THE OUTLINE WITH BOTH FABRIC PIECES RIGHT SIDE TOGETHER. OPTIONAL: PLACE A PIECE OF INTERFACING ON TOP. STITCH THE TACK DOWN LINE



GENTLY PEEL UP THE FABRIC ON THE TACK DOWN LINE AS SHOWN.



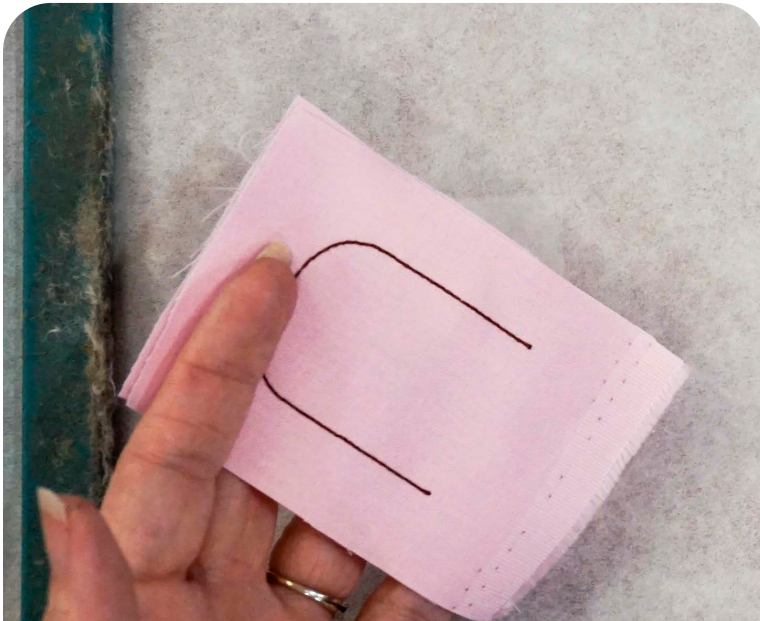

HERE IS THE FABRIC REMOVED.



TRIM AROUND THE TAB WITH PINKING SHEARS LEAVING ABOUT 1/4" AT THE OPEN BOTTOM




TURN THE TAB RIGHT SIDE OUT.




IRON WELL.



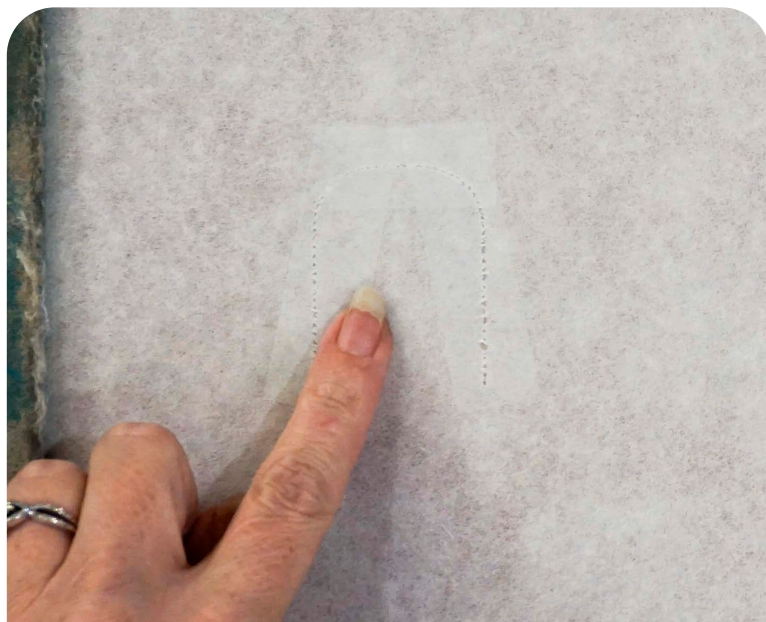

PLACE TAPE ON THE STABILIZER WHERE YOU REMOVED THE TAB

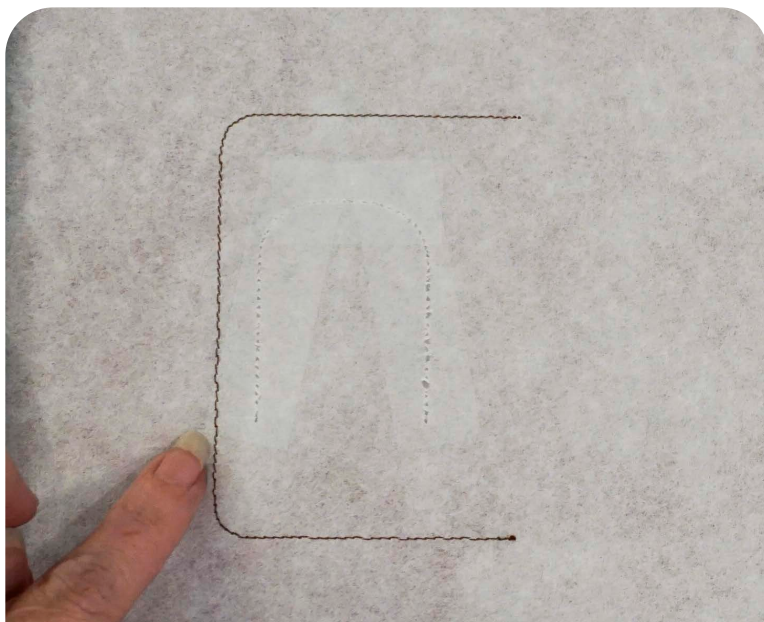

STITCH THE PLACEMENT LINE FOR THE FRONT CARD HOLDER.



PRECUT A PIECE OF FABRIC 6" X 14"



PLACE THE FABRIC RIGHT SIDE UP SO IT OVERLAPS THE TOP OF THE OPEN BOX BY 1/2". CENTER SIDE TO SIDE AND TAPE IN PLACE.





STITCH THE TACK DOWN LINE.



LIFT THE RIGHT SIDE OF THE LOOSE FABRIC AND ALLOW IT TO CATCH ON THIS TACK DOWN LINE.




FINGER CREASE THE FABRIC ON THE TACK DOWN LINE.




SMOOTH THE LOOSE FABRIC AND TAPE IN PLACE



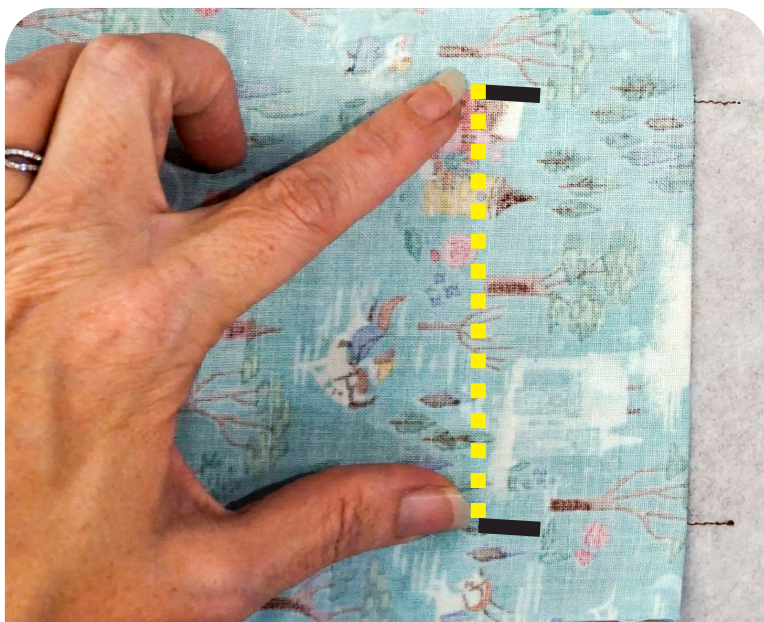

STITCH THE SMALL SIDE LINES.

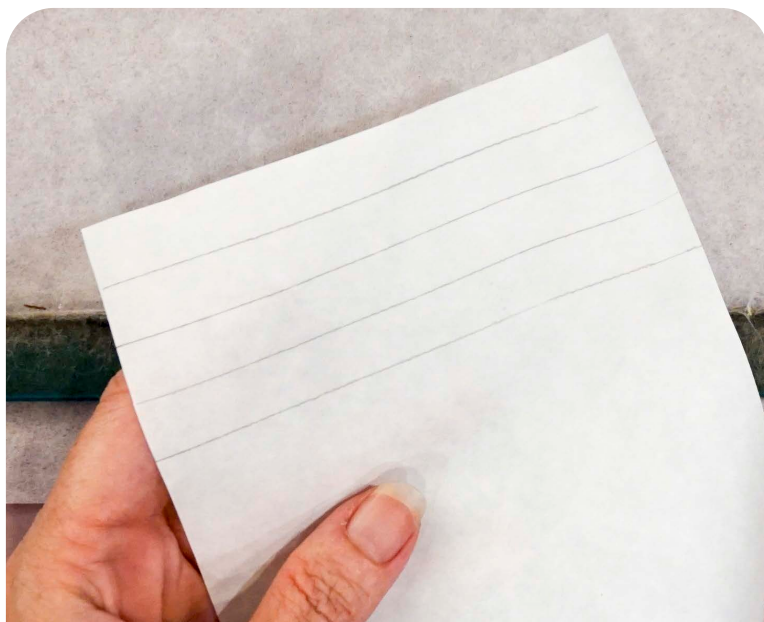

YOU CAN USE SEAM TAPE OR HEAT N BOND LITE. DRAW STRAIGHT LINES ON IT...ABOUT 4.




CUT THE STRIPS ON THE LINES. NO NEED TO CUT STRIPS IF YOU ARE USING SEAM TAPE.



TAKE ONE OF THE STRIPS AND PLACE IT ADHESIVE SIDE DOWN SO IT SPANS THE TOP OF THE SIDE LINES SHOWN IN PHOTO 1 ON THIS PAGE.



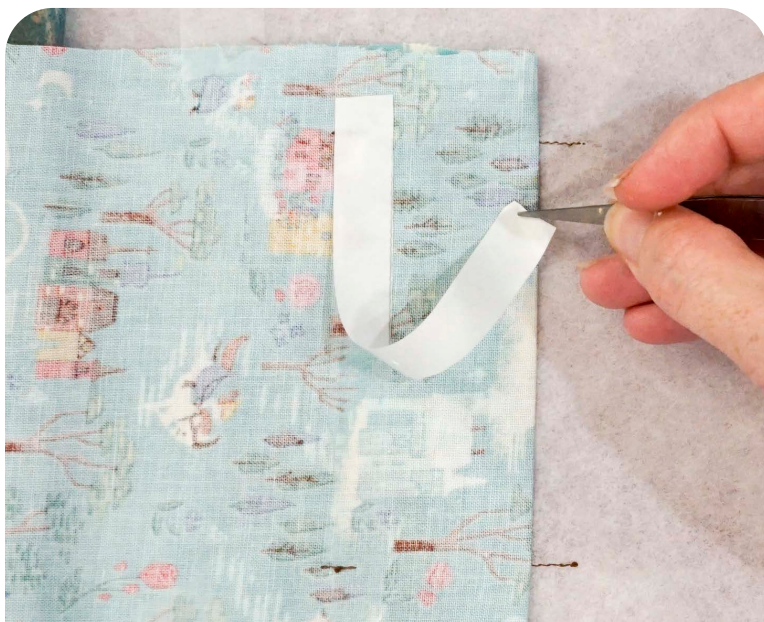

IF YOU NEED TO FUSE THE ADHESIVE TO THE FABRIC, HIT IT WITH THE TIP OF YOUR IRON AND PEEL OF THE PAPER BACKING.



THIS WILL EXPOSE THE ADHESIVE.



FOLD THE LOOSE PORTION OF THE FABRIC RIGHT SIDE DOWN TOWARD THE RIGHT SIDE ALLOWING IT TO CATCH ON THE SIDE LINES. CREASE WITH YOUR FINGER.



STITCH THE NEXT TACK DOWN LINE.






AGAIN LIFT THE RIGHT SIDE OF THE LOOSE FABRIC AND ALLOW IT TO CATCH ON THIS TACK DOWN LINE.



FINGER CREASE THE FABRIC ON THE TACK DOWN LINE. SMOOTH THE LOOSE FABRIC AND TAPE IN PLACE

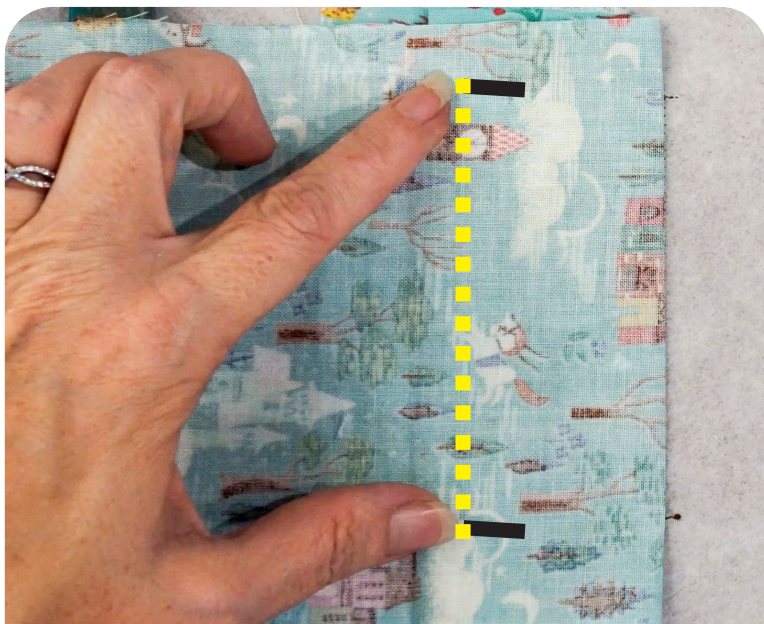


STITCH THE SECOND SET OF SMALL SIDE LINES.



TAKE ANOTHER STRIP AND PLACE IT ADHESIVE SIDE DOWN SO IT SPANS THE TOP OF THE SIDE LINES SHOWN IN PHOTO 3 ON THIS PAGE.



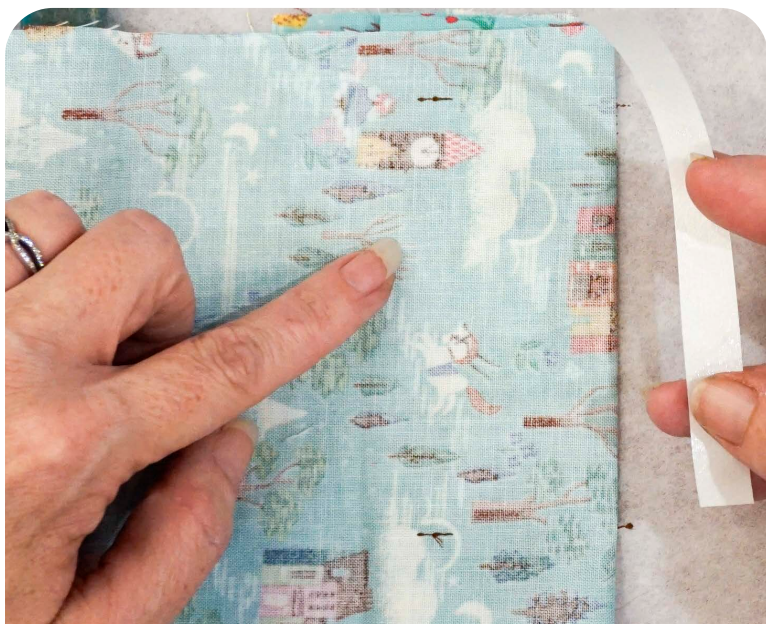

IF YOU NEED TO FUSE THE ADHESIVE TO THE FABRIC, HIT IT WITH THE TIP OF YOUR IRON AND PEEL OF THE PAPER BACKING.



THIS WILL EXPOSE THE ADHESIVE.



FOLD THE LOOSE PORTION OF THE FABRIC RIGHT SIDE DOWN TOWARD THE RIGHT SIDE ALLOWING IT TO CATCH ON THE SIDE LINES. CREASE WITH YOUR FINGER. THIS CREATES THE SECOND CARD POUCH.



STITCH THE TACK DOWN LINE.







NOW CUT A PIECE OF FABRIC FOR THE BACK-SIDE. IT CAN BE THE SAME FABRIC OR A DIFFERENT FABRIC.



PLACE IT RIGHT SIDE DOWN ON TOP OF THE CARD HOLDER.

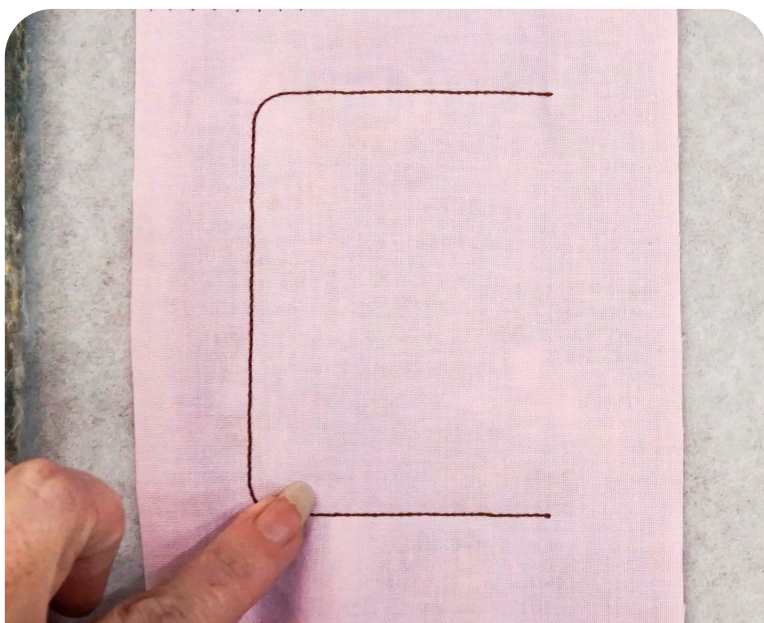


STITCH THE TACK DOWN

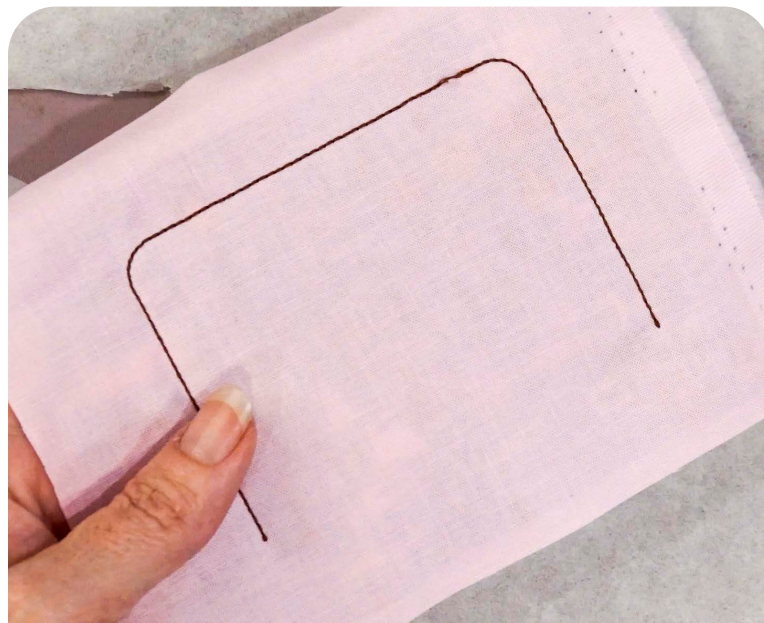

REMOVE THE CARD HOLDER FROM THE STABILIZER. IF YOU USED INTERFACING....TRIM IT VERY CLOSE TO THE TACK DOWN LINE




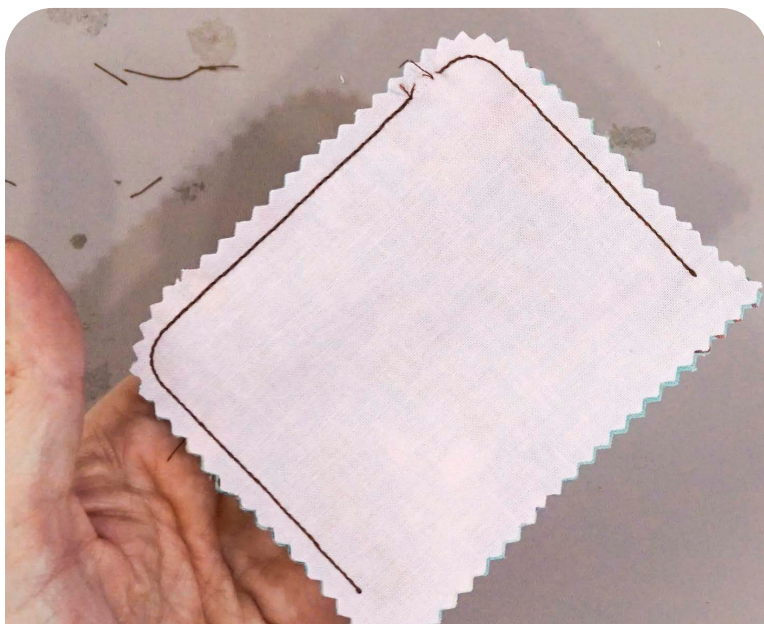

TRIM THE CARD HOLDER CLOSE TO THE TACK DOWN LINE WITH PINKING SHEARS BUT AT THE OPEN BOTTOM LEAVE 1/2" OF EXTRA AS SHOWN.



TURN RIGHT SIDE OUT.


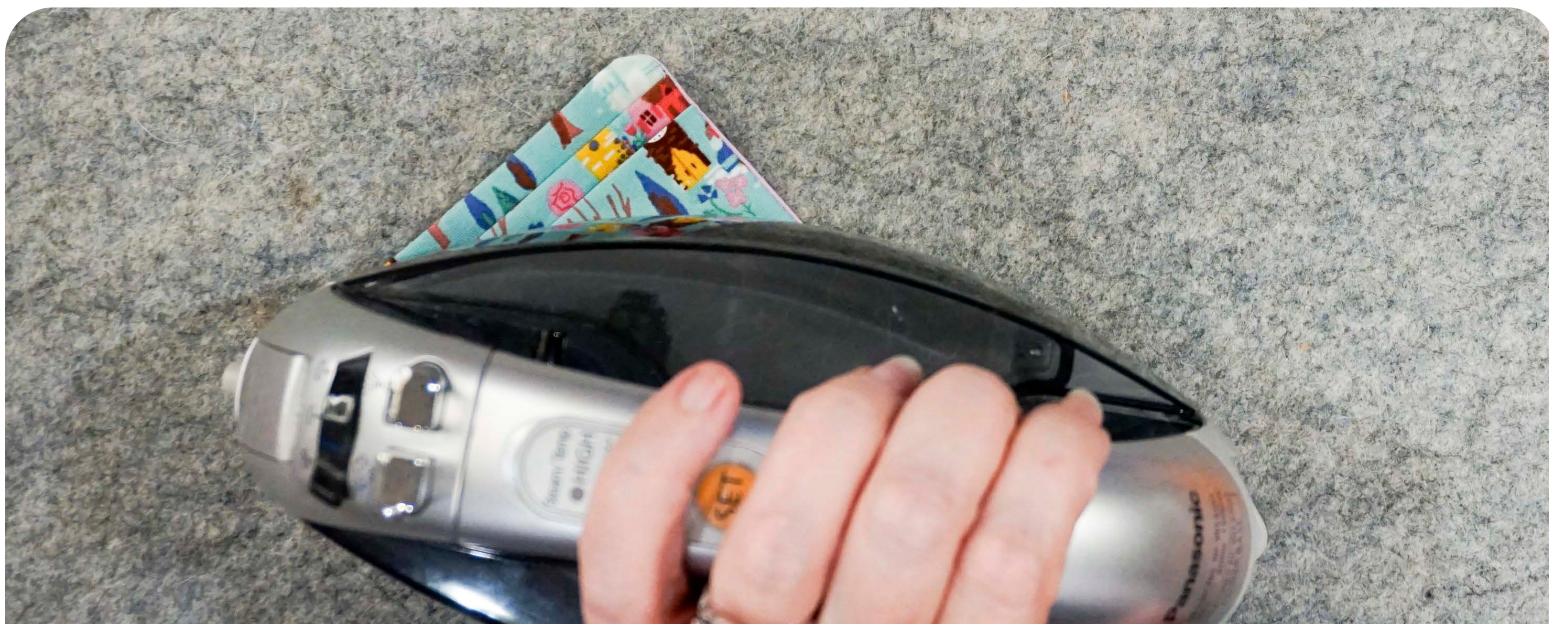


IRON TO SET THE INTERFACING AND REMOVE WRINKLES. SET ASIDE.






COIN AND CARD WALLET

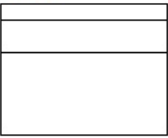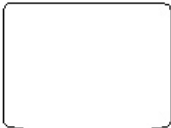 1 (1/2) 1. Sky Blue 503st. 	 2 2. Light Blue 149st. 	 3 (1/3) 3. Vermilion 63st. 
 4 (1/3) 4. Black 43st. 	 5 5. Salmon Pink 59st. 	 3 (2/3) 6. Vermilion 62st. 
 6 7. Orange 106st. 	 7 8. Reddish Brown 108st. 	 8 9. Seacrest 118st. 
 9 (1/2) 10. Teal Green 108st. 	 10 11. Lilac 79st. 	 4 (2/3) 12. Black 73st. 
 1 (2/2) 13. Sky Blue 85st. 	 3 (3/3) 14. Vermilion 73st. 	 4 (3/3) 15. Black 69st. 
 9 (2/2) 16. Teal Green 82st. 	 11 17. Lavender 166st. 	 12 18. Pink 544st. 




LOAD PART 2 OF THE WALLET.




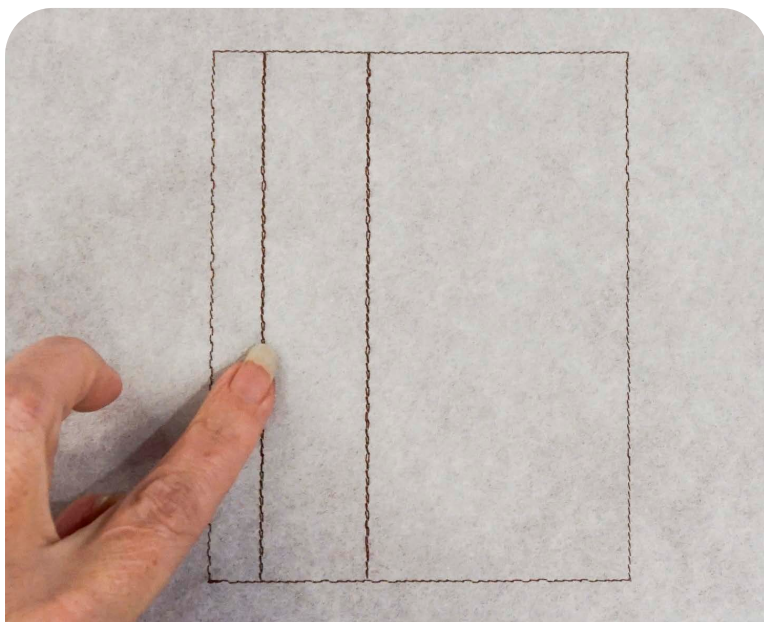

STITCH THE PLACEMENT LINES ON A NEW PIECE OF NO SHOW MESH CUT AWAY STABILIZER.

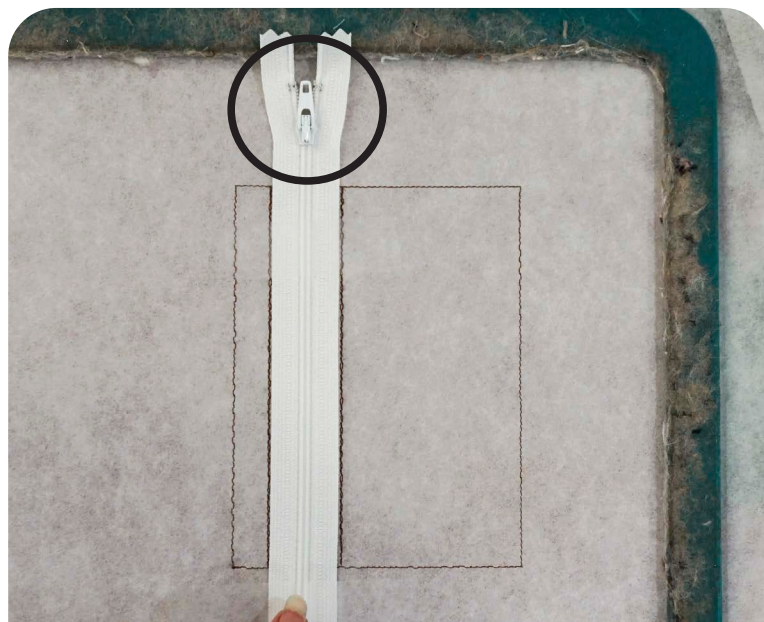

PLACE THE ZIPPER RIGHT SIDE UP WITH THE ZIPPER PULL ON THIS SIDE OF THE BOX. TAPE IN PLACE WELL.

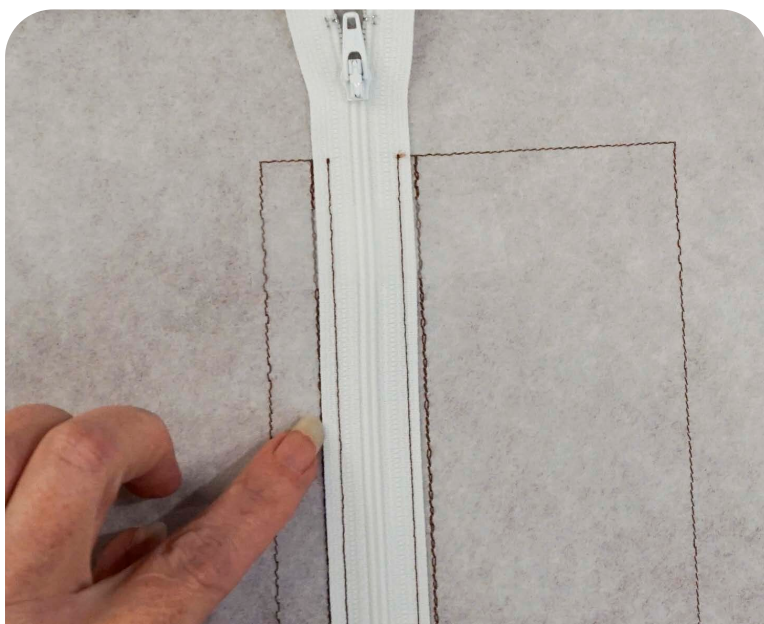


STITCH THE TACK DOWN LINES.




STITCH THE PLACEMENT BOX FOR THE TAB




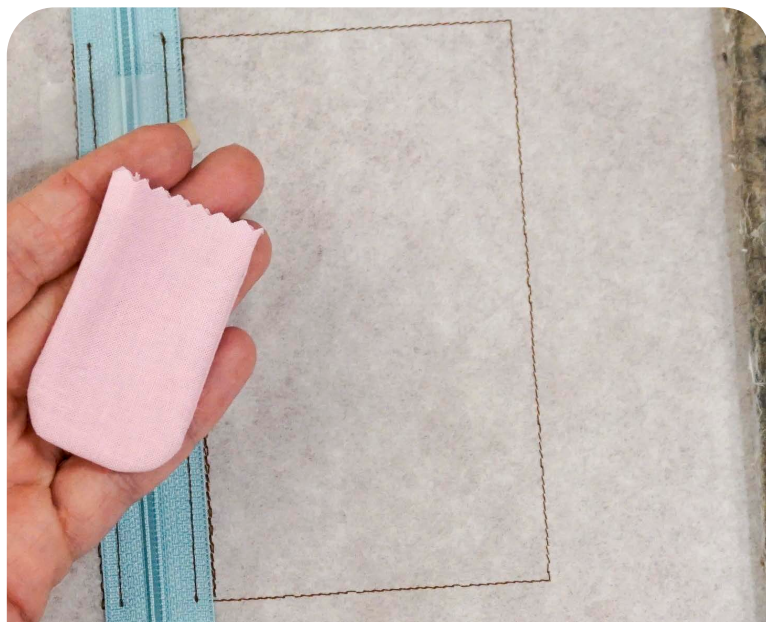


WE WILL NEED THE TAB NOW.

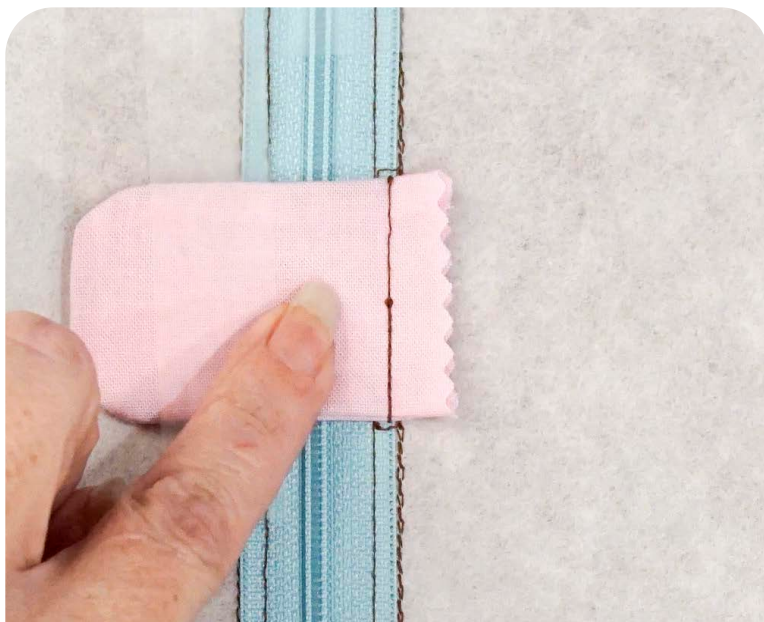

PLACE THE TAB OVER THE PLACEMENT BOX AND TAPE IN PLACE. STITCH THE TACK DOWN LINE

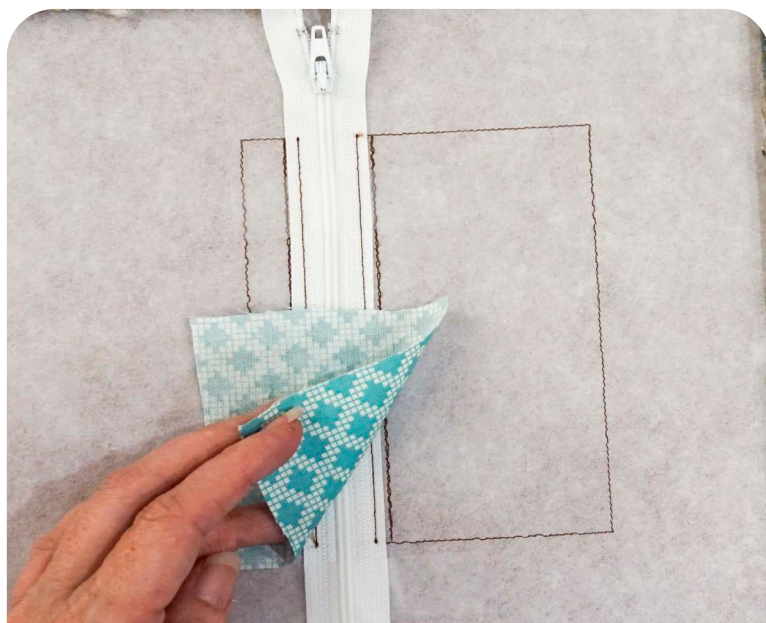


CUT TWO SMALL PIECES OF FABRIC AS SHOWN. PLACE ONE OF THEM RIGHT SIDE DOWN AS SHOWN.

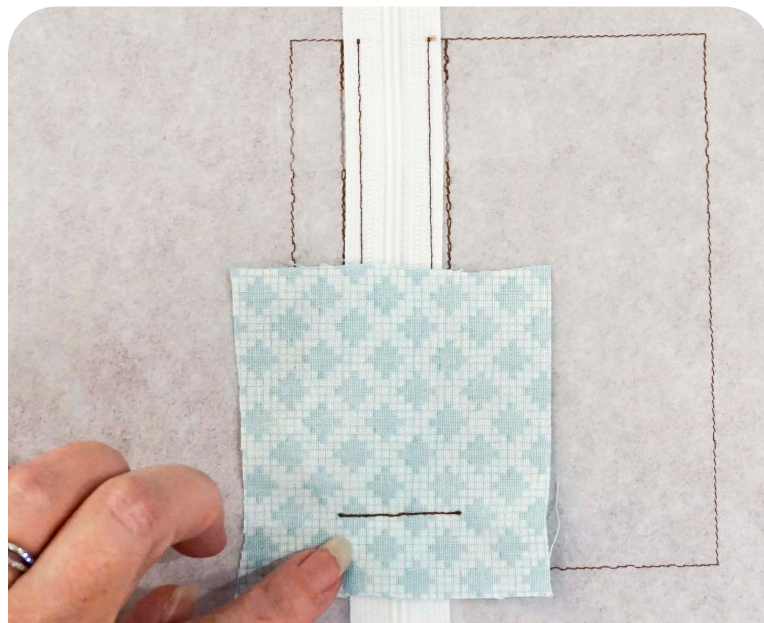


STITCH THE TACK DOWN LINE.




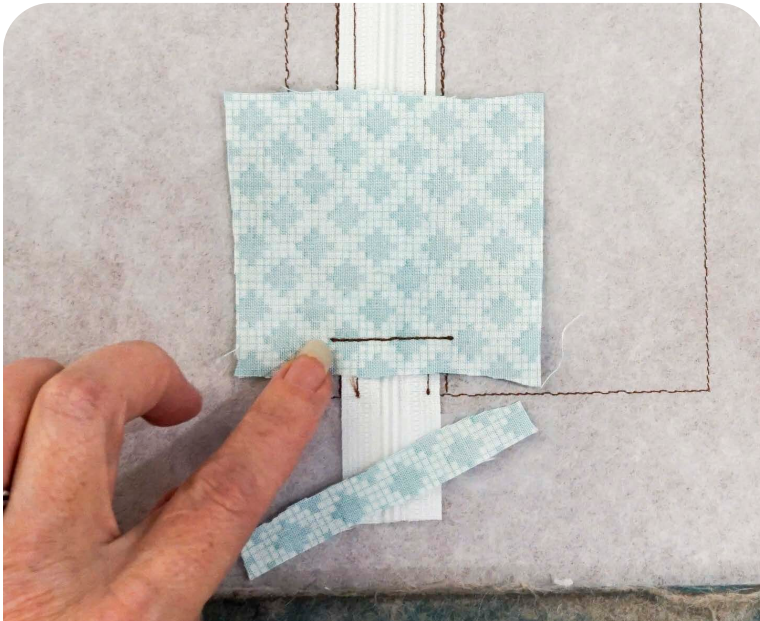


TRIM THE FABRIC NEXT TO THE TACK DOWN LINE.

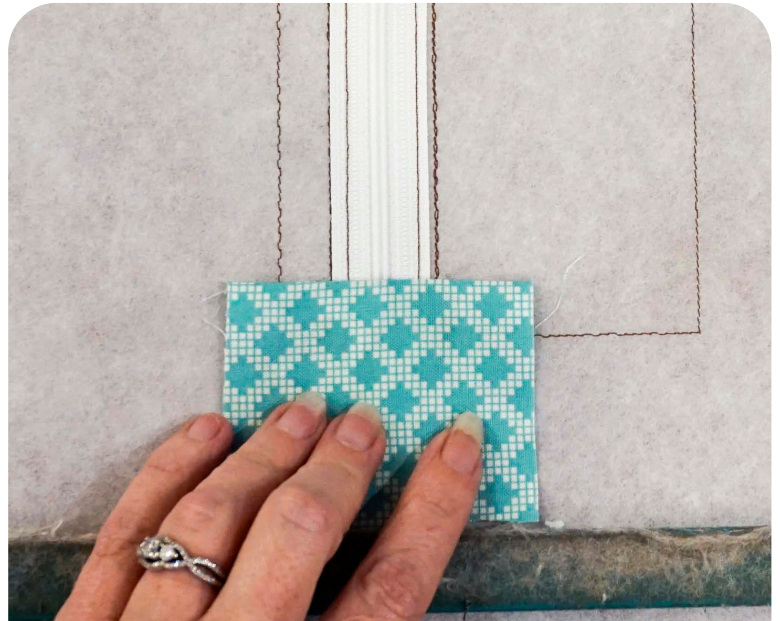

UNFOLD THIS PIECE OF FABRIC AND TAPE IN PLACE.

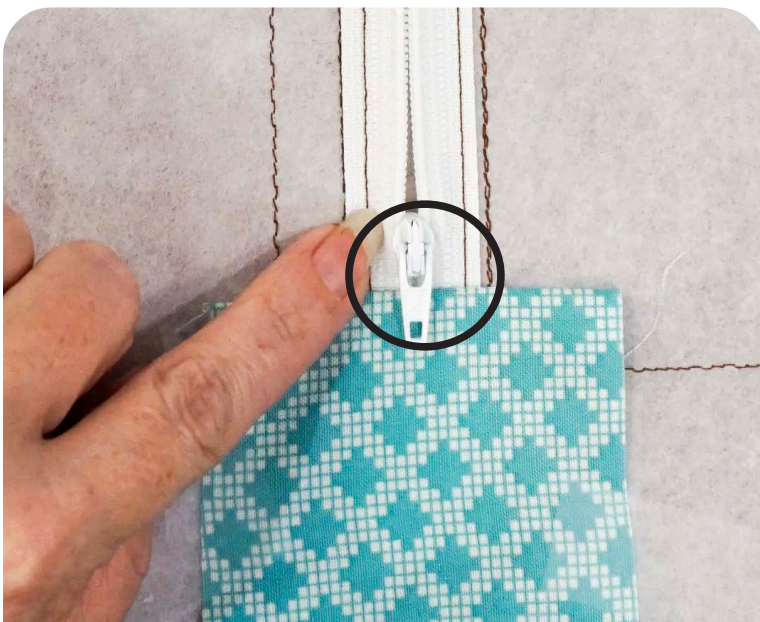


UNZIP THE ZIPPER ALL THE WAY.

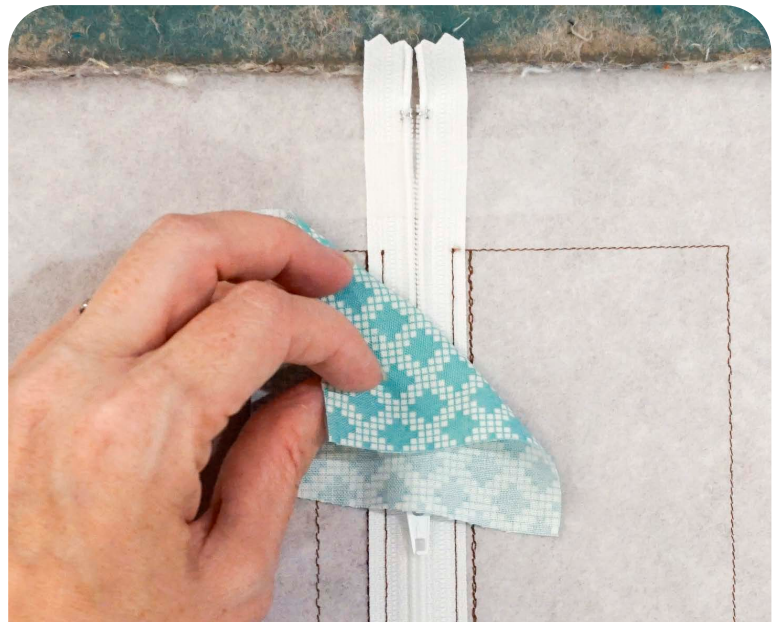


PLACE THE SECOND PIECE OF FABRIC RIGHT SIDE DOWN AS SHOWN ON THE OTHER SIDE..



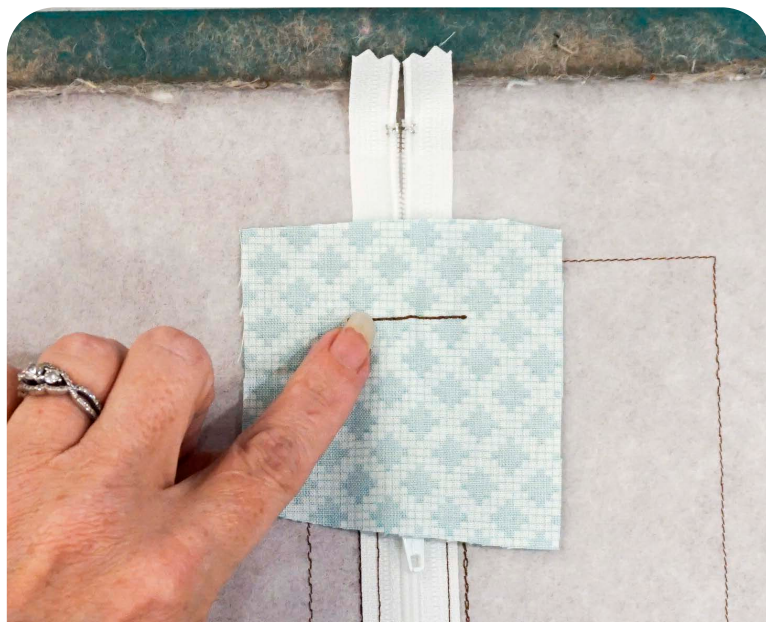


STITCH THE TACK DOWN LINE.

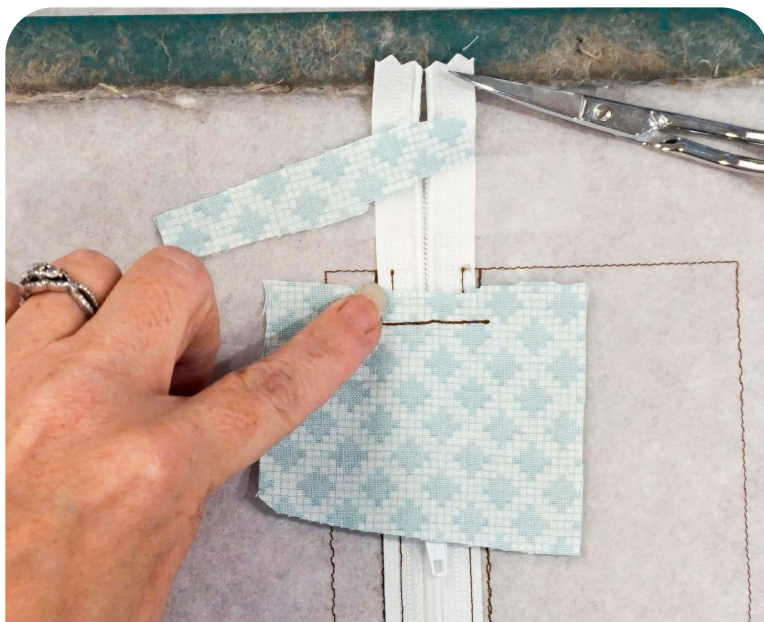

TRIM THE FABRIC NEXT TO THE TACK DOWN LINE.




UNFOLD THIS PIECE OF FABRIC AND TAPE IN PLACE.

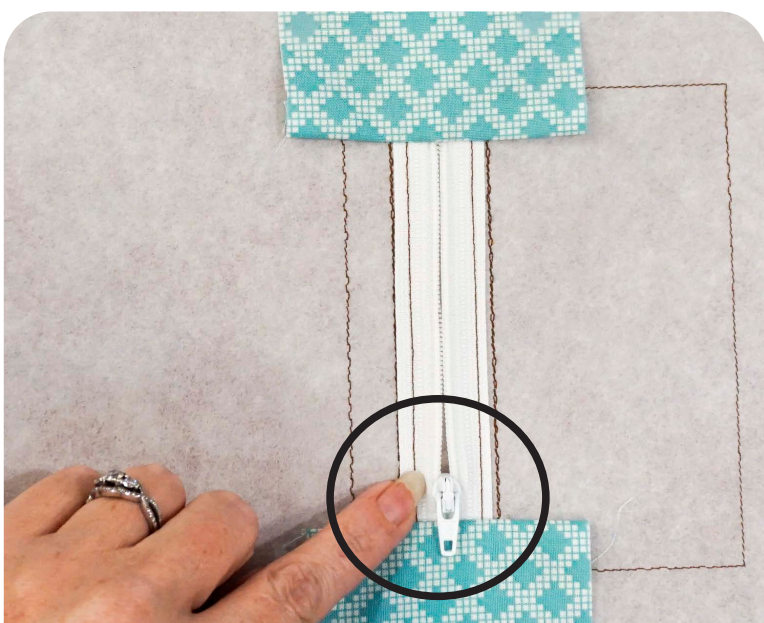


MAKE SURE THE ZIPPER PULL IS ALL THE WAY ON THIS SIDE.



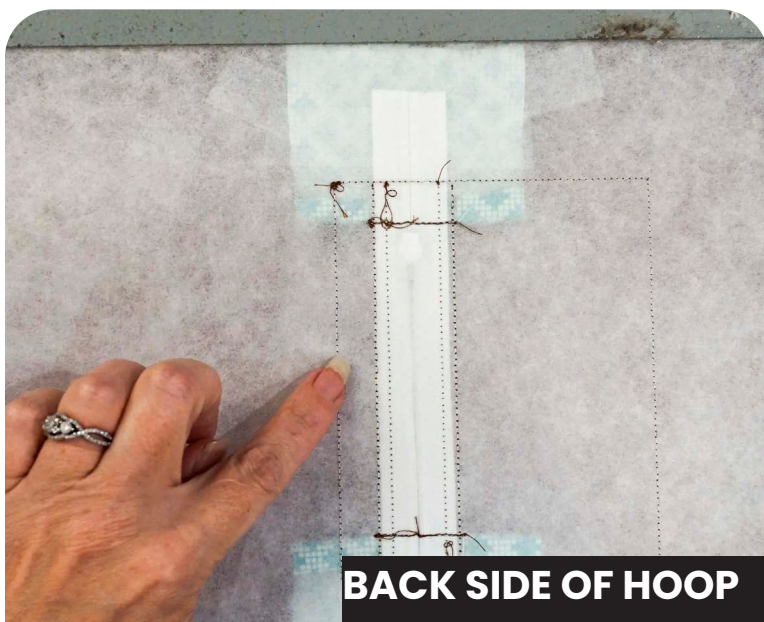


BACK SIDE OF HOOP

FLIP THE HOOP TO THE BACKSIDE

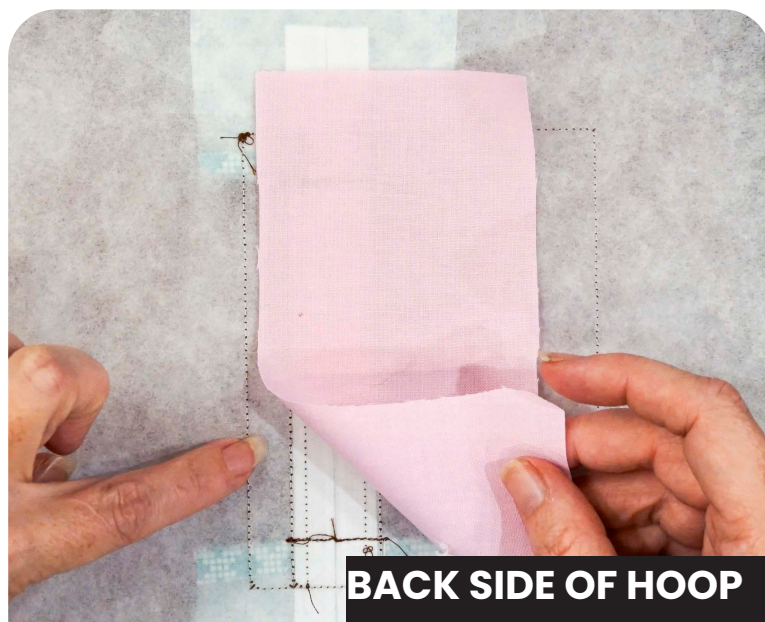


BACK SIDE OF HOOP

CUT A GENEROUSLY PIECE OF FABRIC WIDER THAN THE BOX AND A FEW INCHES TALL. FOR THE LINER. TAPE IT RIGHT SIDE DOWN SO IT OVERLAPS THIS SIDE OF THE ZIPPER BY 1/2". TAPE IN PLACE WELL.

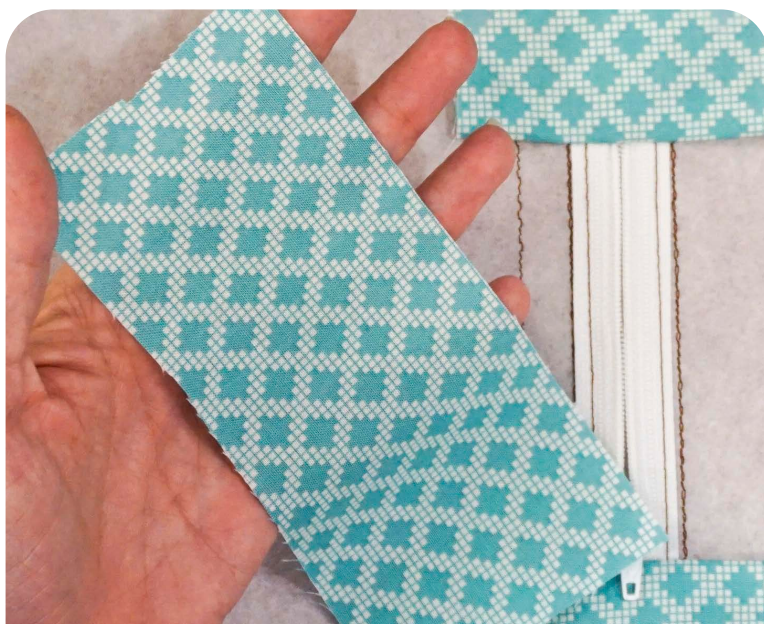


CUT A GENEROUSLY PIECE OF FABRIC WIDER THAN THE BOX AND A FEW INCHES TALL. FOR THE EXTERIOR.

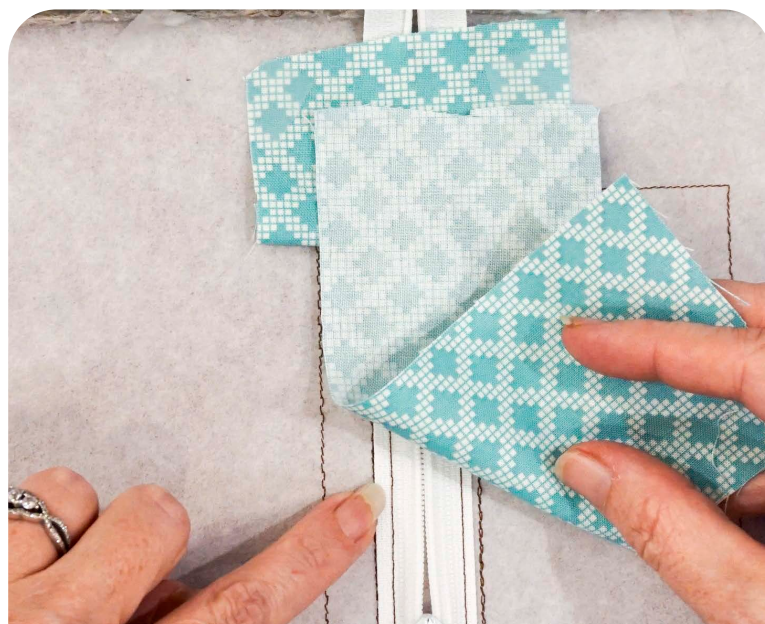


TAPE IT RIGHT SIDE DOWN SO IT OVERLAPS THIS SIDE OF THE ZIPPER BY 1/2". TAPE IN PLACE WELL.




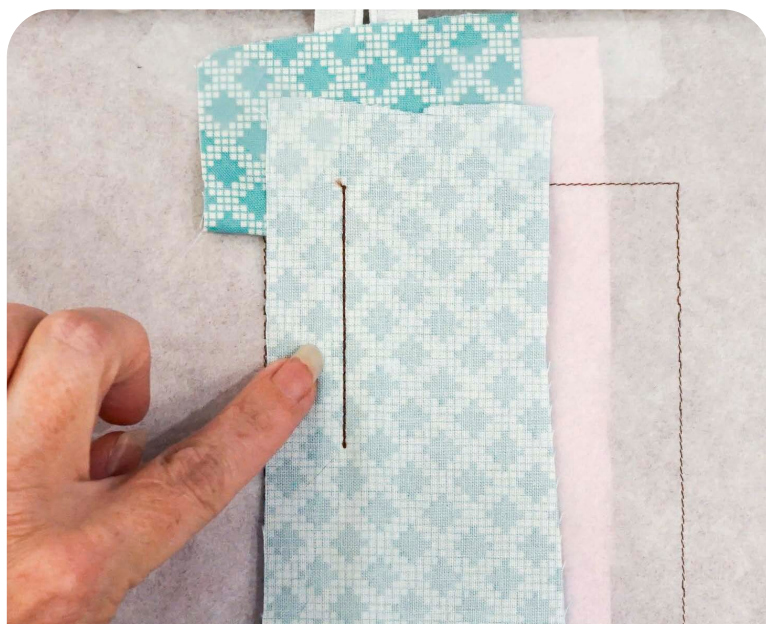

STITCH THE PARTIAL TACK DOWN LINE.

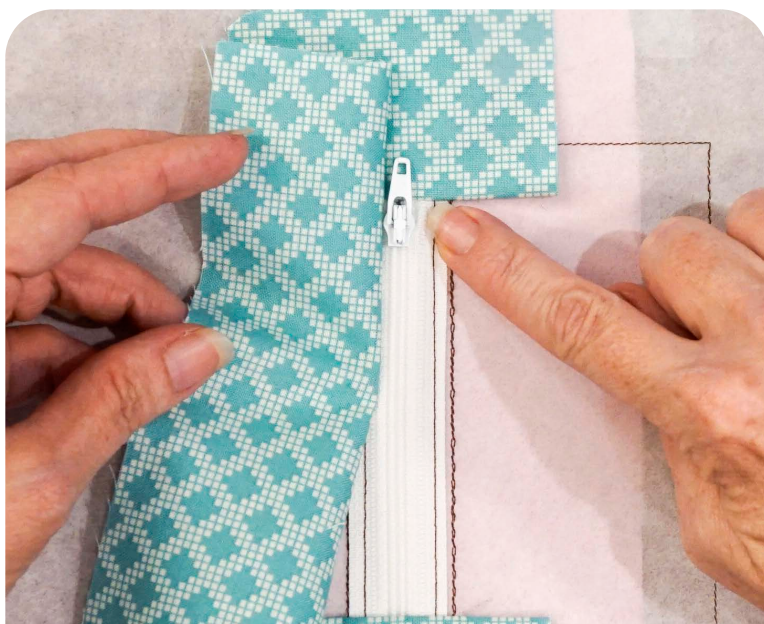

LIFT THE FABRIC AND PULL THE ZIPPER ALL THE WAY CLOSED AS SHOWN.

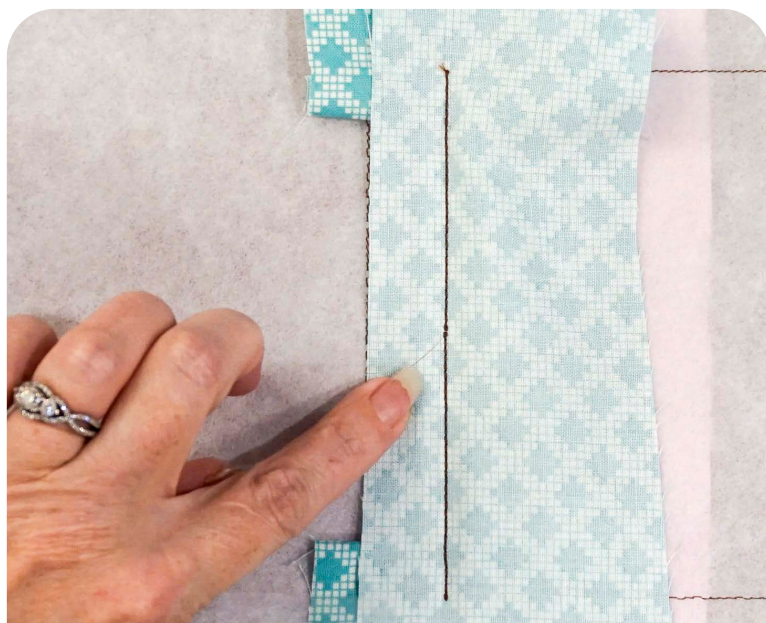

STITCH THE REST OF THE TACK DOWN LINE.



TRIM THE EXTERIOR FABRIC CLOSE TO THE TACK DOWN LINE.





UNFOLD THE FABRIC AND FINGER CREASE.
PLACE IN PLACE WELL.



BACK SIDE OF HOOP

ON THE BACKSIDE OF THE HOOP, TRIM THE LIN-
ER FABRIC CLOSE TO THE TACK DOWN LINE.



BACK SIDE OF HOOP

UNFOLD THE FABRIC AND FINGER CREASE.



BACK SIDE OF HOOP

PLACE IN PLACE WELL.






WE NEED THE SECOND PIECE OF FABRIC THAT IS 6" X 14"



WE ALSO NEED ONE PIECE OF FABRIC TO GENEROUSLY COVER THE OVERALL WALLET OUTLINE.




ON THE BACKSIDE OF THE HOOP, PLACE THE LINER PIECE OF FABRIC RIGHT SIDE DOWN SO IT OVERLAPS THE ZIPPER ON THIS SIDE.

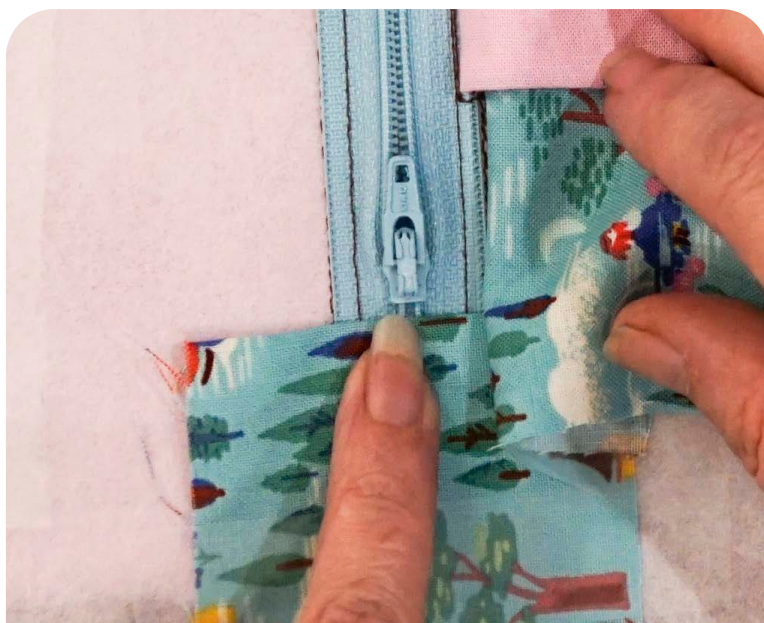


MAKE SURE THE ZIPPER PULL IS ALL THE WAY ON THIS SIDE.




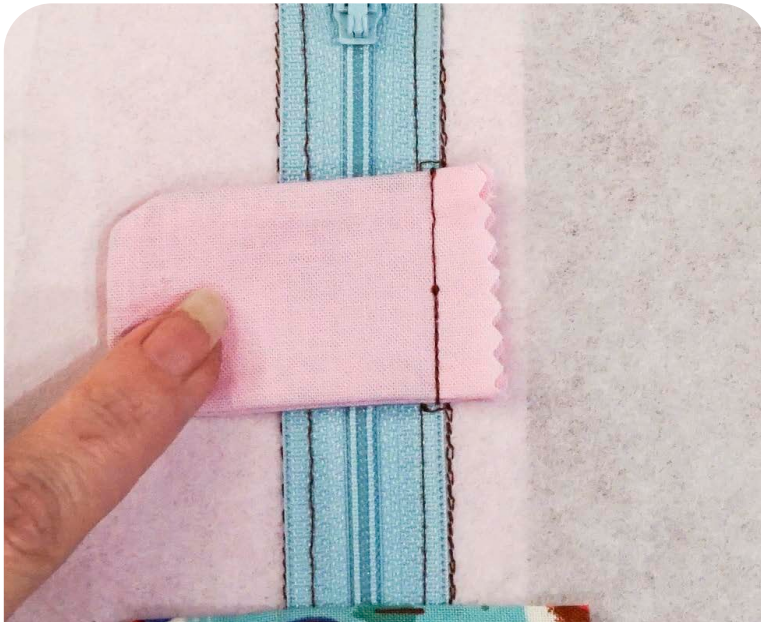

MAKE SURE THE TAB IS FLIPPED ON THIS SIDE.
TAPE IN PLACE.

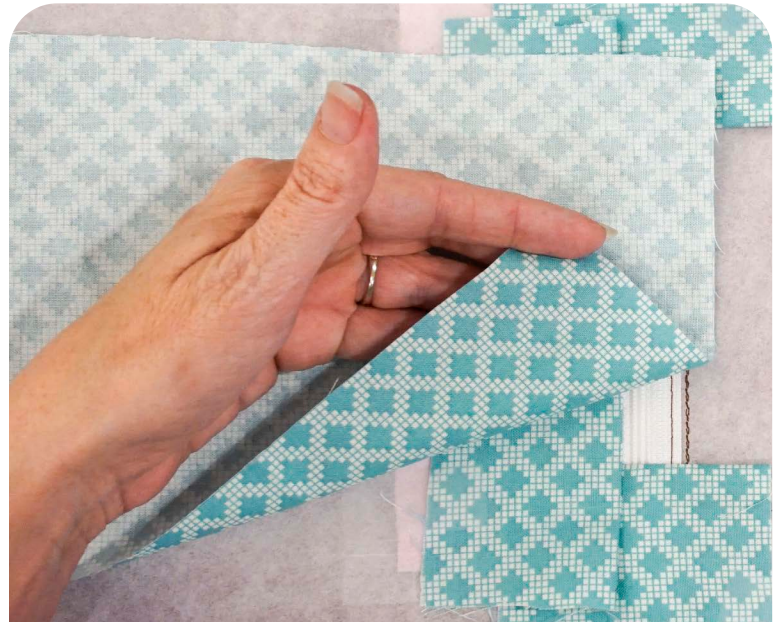

WE NEED THE LARGE PIECE OF EXTERIOR FABRIC
AND TAPE IT RIGHT SIDE DOWN SO IT OVERLAPS
THIS SIDE OF THE ZIPPER BY 1/2". TAPE IN PLACE
WELL.

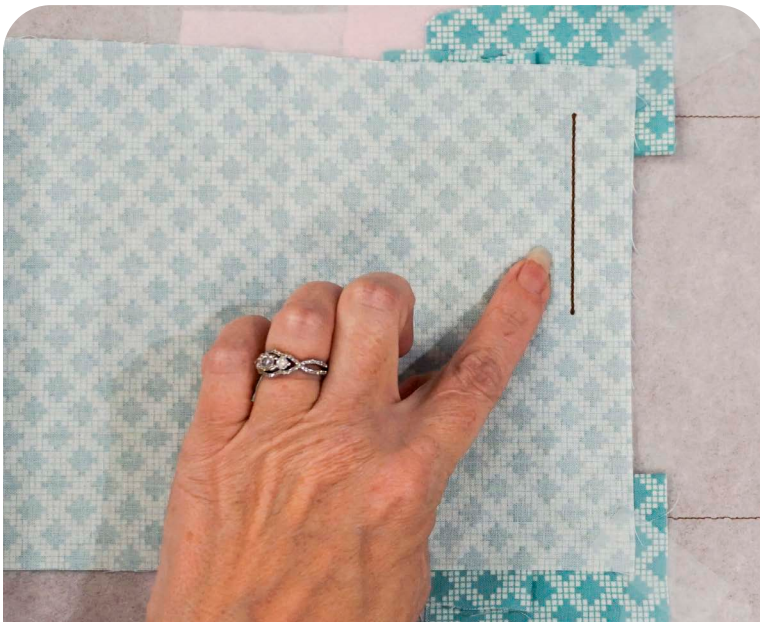


STITCH THE PARTIAL TACK DOWN LINE.




LIFT THE FABRIC AND PULL THE ZIPPER ALL THE
WAY CLOSED AS SHOWN.



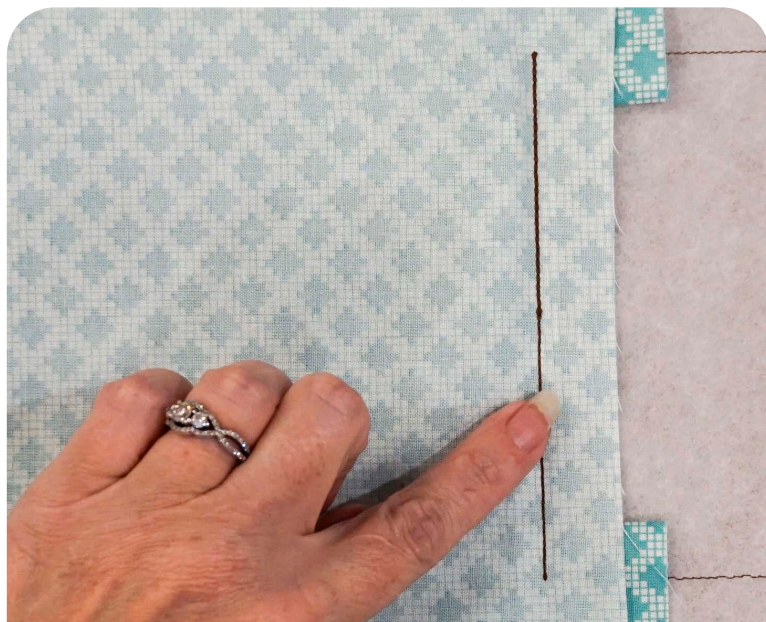

STITCH THE REST OF THE TACK DOWN LINE.

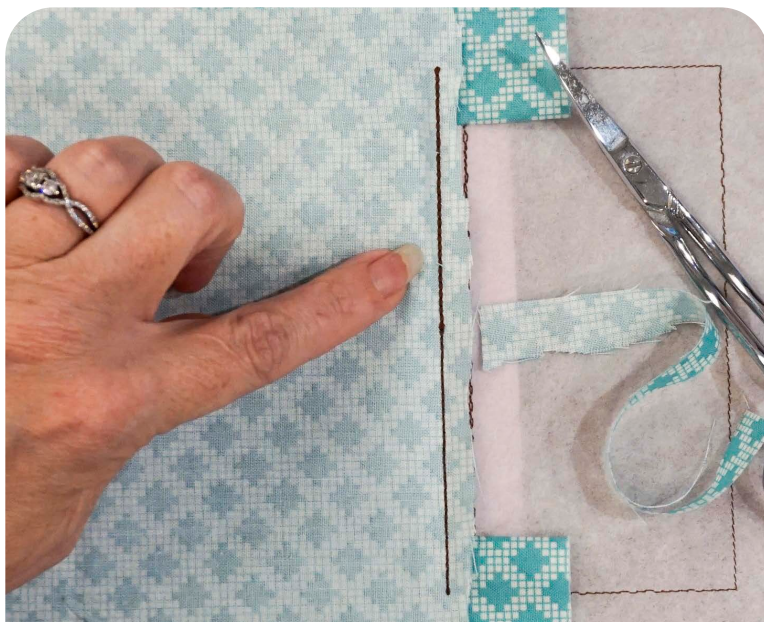


TRIM THE EXTERIOR FABRIC CLOSE TO THE TACK DOWN LINE.



BACK SIDE OF HOOP

ON THE BACKSIDE OF THE HOOP, TRIM THE LINER FABRIC CLOSE TO THE TACK DOWN LINE. MAKE SURE YOU KEEP THE LINER FABRIC TAPED TO THE SIDE ITS ON NOW.

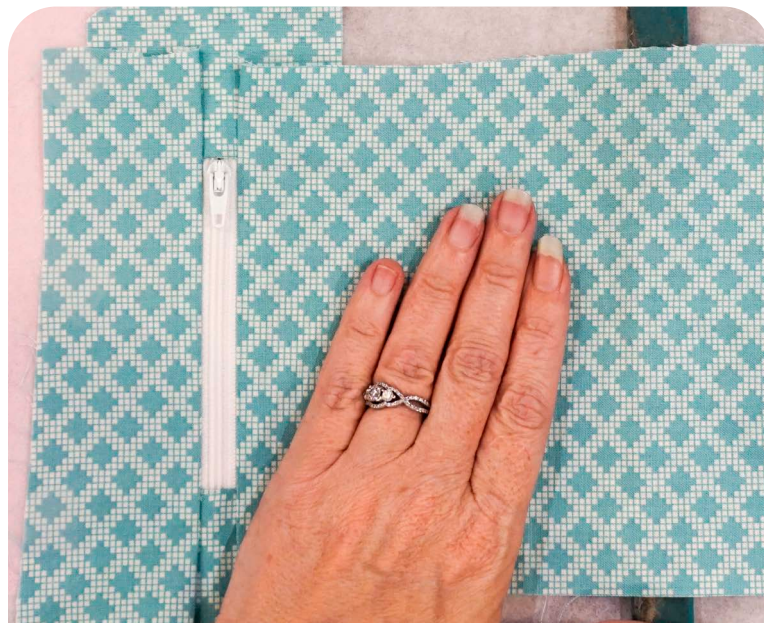

UNFOLD THE FABRIC AND FINGER CREASE. PLACE IN PLACE WELL.





SPRAY ADHESIVE ON THE STABILIZER.



SMOOTH THE FABRIC WELL.



STITCH THE TACK DOWN LINE.




LIFT THE RIGHT SIDE OF THE LOOSE FABRIC AND ALLOW IT TO CATCH ON THIS TACK DOWN LINE.





FINGER CREASE THE FABRIC ON THE TACK DOWN LINE. SMOOTH THE LOOSE FABRIC AND TAPE IN PLACE

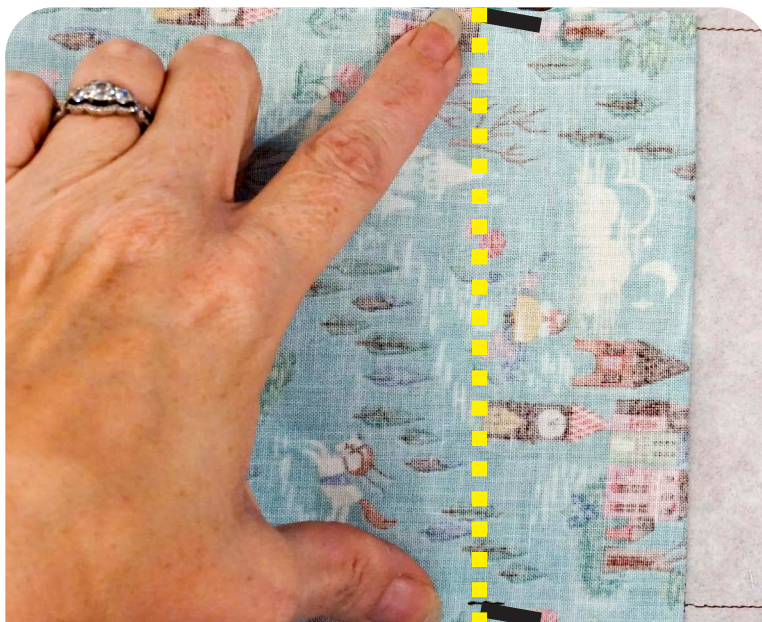

STITCH THE SMALL SIDE LINES.



TAKE ONE OF THE STRIPS AND PLACE IT ADHESIVE SIDE DOWN SO IT SPANS THE TOP OF THE SIDE LINES SHOWN IN PHOTO 1 ON THIS PAGE.



IF YOU NEED TO FUSE THE ADHESIVE TO THE FABRIC, HIT IT WITH THE TIP OF YOUR IRON AND PEEL OF THE PAPER BACKING.





THIS WILL EXPOSE THE ADHESIVE.



FOLD THE LOOSE PORTION OF THE FABRIC RIGHT SIDE DOWN TOWARD THE RIGHT SIDE ALLOWING IT TO CATCH ON THE SIDE LINES. CREASE WITH YOUR FINGER. THIS CREATES THE FIRST CARD POUCH.



BECAUSE IM USING HEAT N BOND LITE...I USE THE TIP OF THE IRON TO SET THE TAPE UNDER-NEATH.




STITCH THE TACK DOWN LINE.






LIFT THE RIGHT SIDE OF THE LOOSE FABRIC AND ALLOW IT TO CATCH ON THIS TACK DOWN LINE. FINGER CREASE THE FABRIC ON THE TACK DOWN LINE. SMOOTH THE LOOSE FABRIC AND TAPE IN PLACE

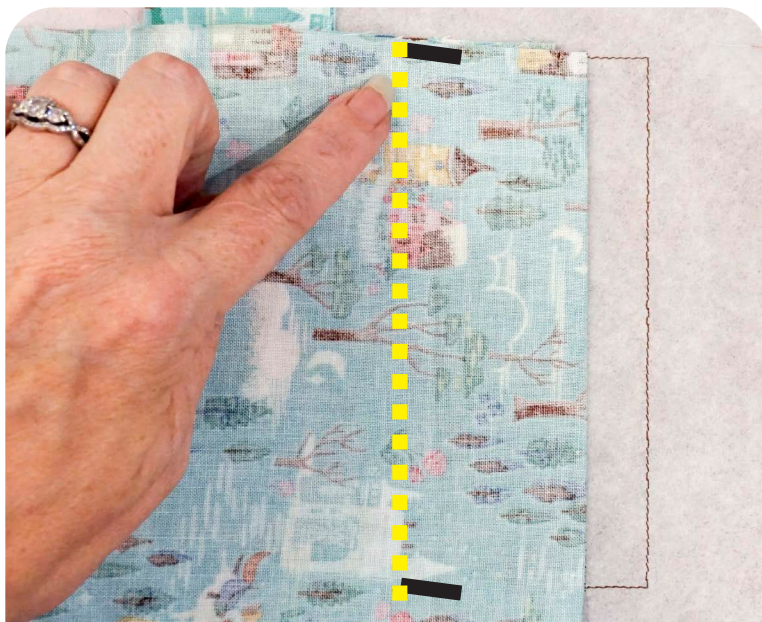

STITCH THE SMALL SIDE LINES.



TAKE ONE OF THE STRIPS AND PLACE IT ADHESIVE SIDE DOWN SO IT SPANS THE TOP OF THE SIDE LINES SHOWN IN PHOTO 1 ON THIS PAGE.

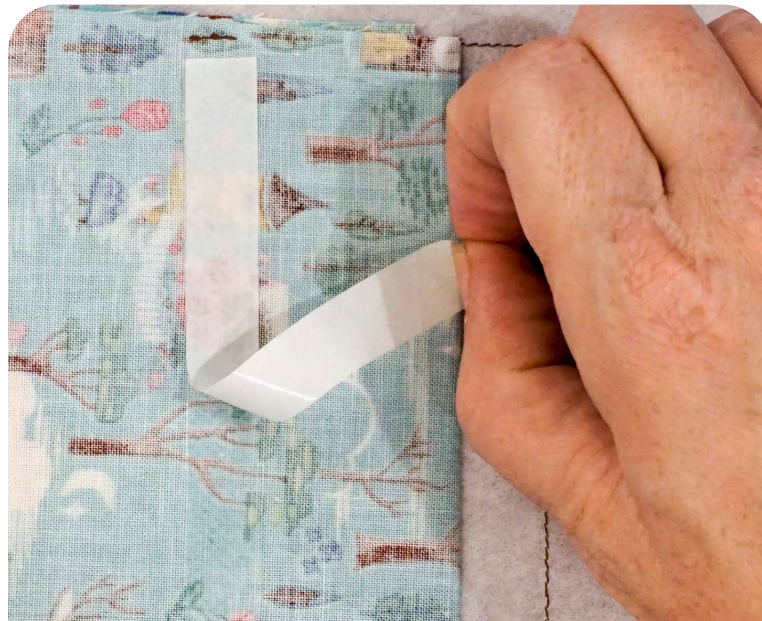

IF YOU NEED TO FUSE THE ADHESIVE TO THE FABRIC, HIT IT WITH THE TIP OF YOUR IRON AND PEEL OF THE PAPER BACKING.





FOLD THE LOOSE PORTION OF THE FABRIC RIGHT SIDE DOWN TOWARD THE RIGHT SIDE ALLOWING IT TO CATCH ON THE SIDE LINES. CREASE WITH YOUR FINGER. THIS CREATES THE SECOND CARD POUCH.



STITCH THE PLACEMENT LINE FOR THE CARD HOLDER.




WE NEED THE CARD HOLDER.



THERE ARE SMALL NOTCHES ON THIS PLACEMENT LINE THAT ALLOW YOU TO CENTER THE HOLDER. THERE IS ALSO A LINE ON THE LINER SIDE SO YOU GET IT PLACED PERFECT.




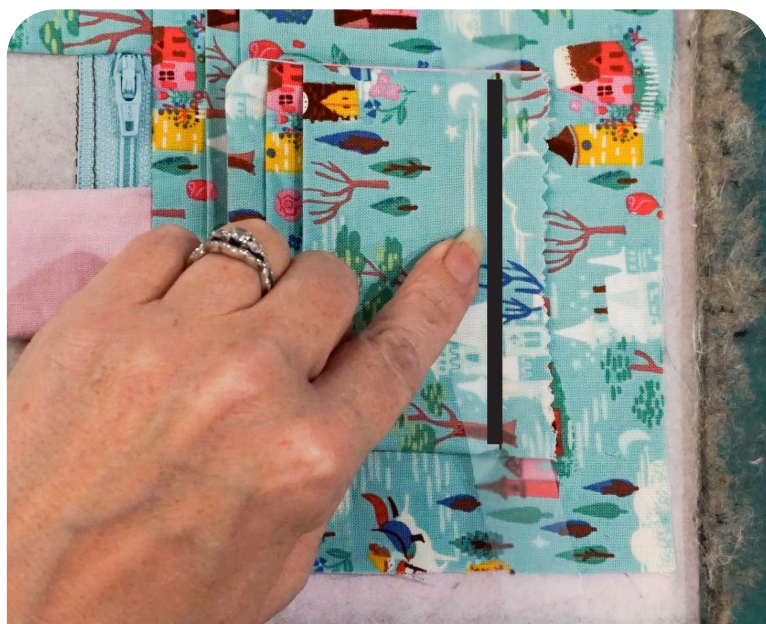

STITCH THE TACK DOWN LINE FOR THE CARD HOLDER.



FOLD THE TAB TO THIS SIDE AND TAPE IN PLACE.

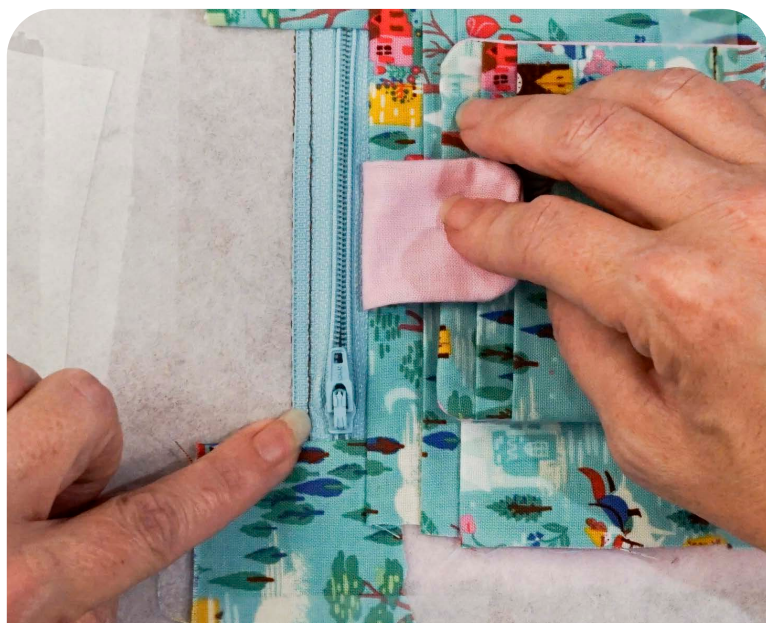

UNZIP THE ZIPPER HALF WAY.



BACK SIDE OF HOOP


FLIP THE HOOP OVER AND UNTAPE THE TOP MOST LINER FABRIC.






BACK SIDE OF HOOP

UNFOLD IT SO ITS RIGHT SIDE UP.

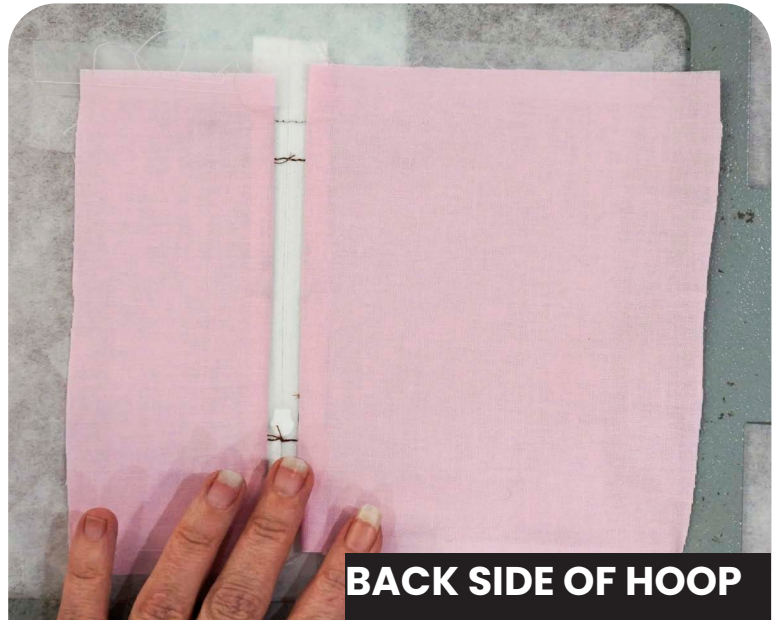


BACK SIDE OF HOOP

NOW THE BACK WILL LOOK LIKE THIS. TAPE EVERYTHING IN PLACE WELL.

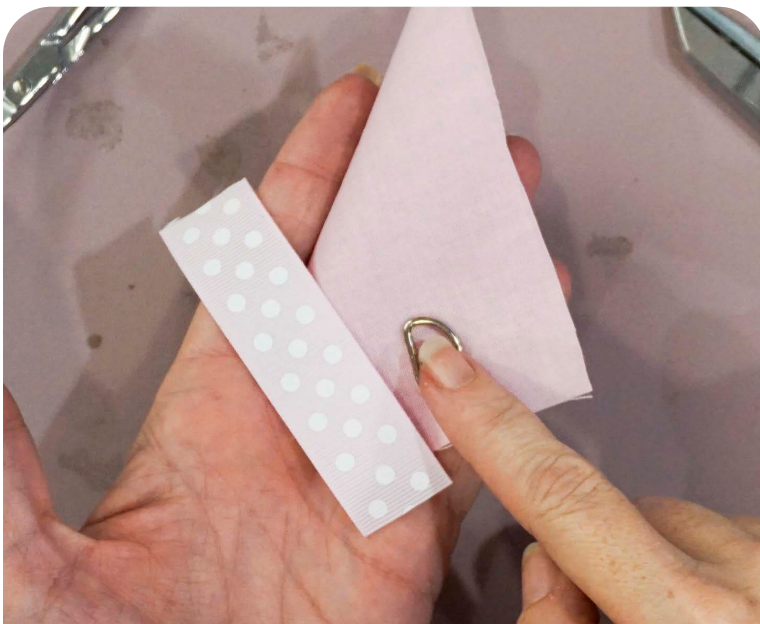

OPTIONAL: YOU CAN ADD A DRING WITH RIBBON OR A STRIP OF FABRIC

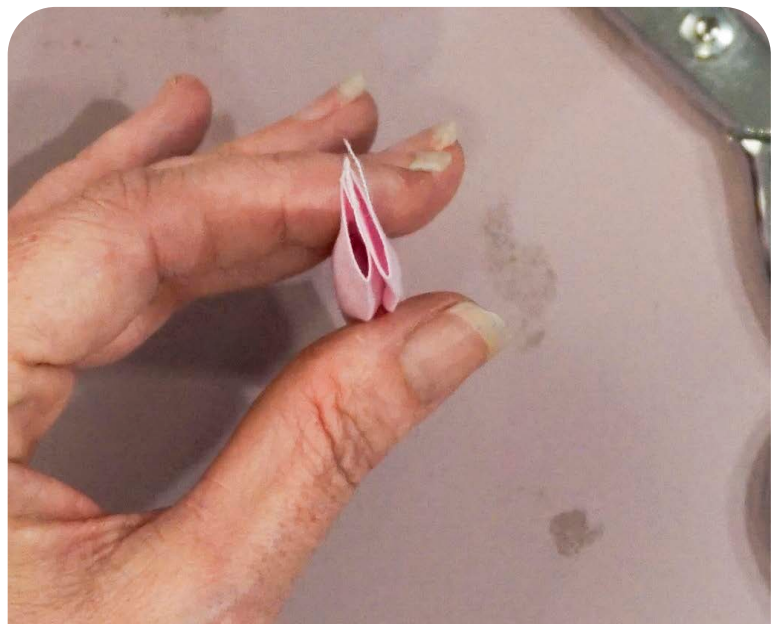


I AM USING FABRIC AND CREATE A DOUBLE FOLD BIAS STRIP OF FABRIC





THREAD THE RIBBON OR D-RING THROUGH THE D-RING.

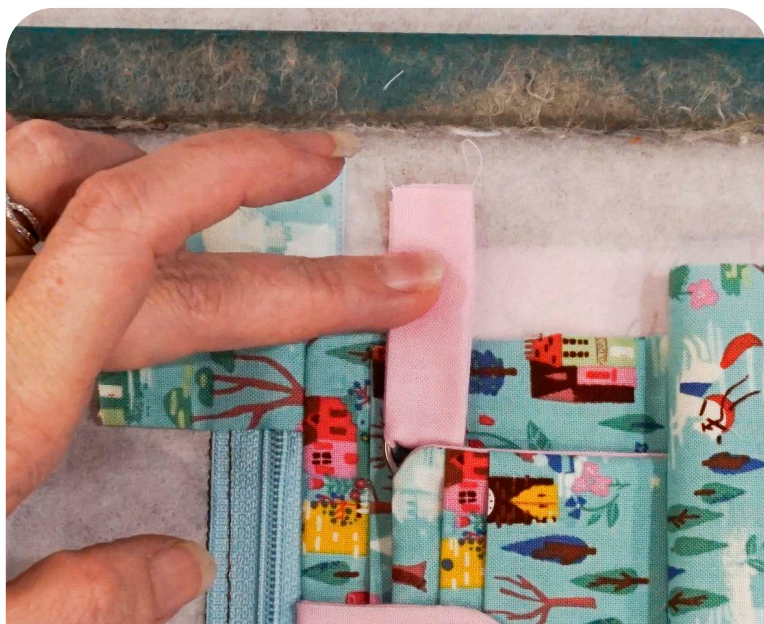

FOLD THE FABRIC STRIP/RIBBON IN HALF AND PLACE IT ON THE SIDE OF THE WALLET NEAR THE ZIPPER. KEEP THE D-RING AT LEAST AN INCH FROM THE OUTLINE BOX ON THE STABILIZER




CUT A VERY GENEROUS PIECE OF EXTERIOR FABRIC FOR THE OVERALL WALLET SIZE.




PLACE IT RIGHT SIDE DOWN CENTERED.



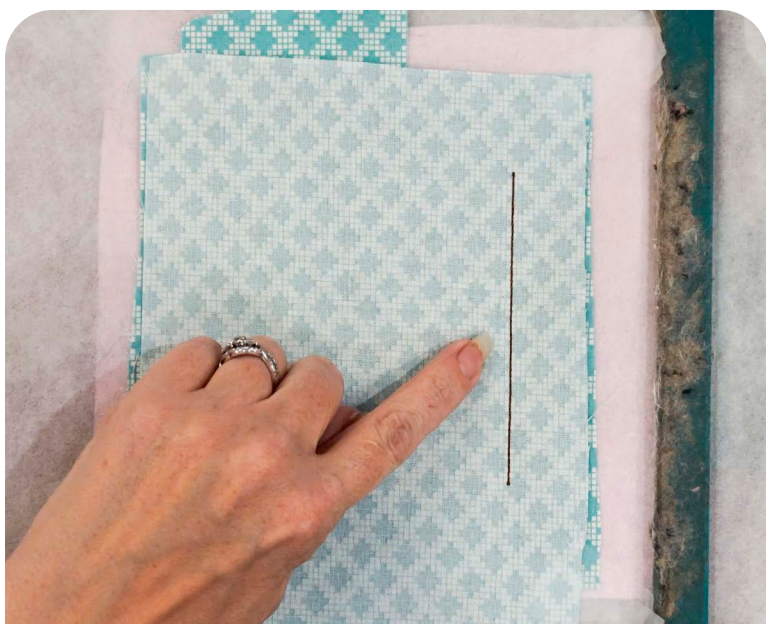

STITCH THE FIRST TACK DOWN LINE. MAKE SURE THE ZIPPER IS UNZIPPED HALFWAY!!

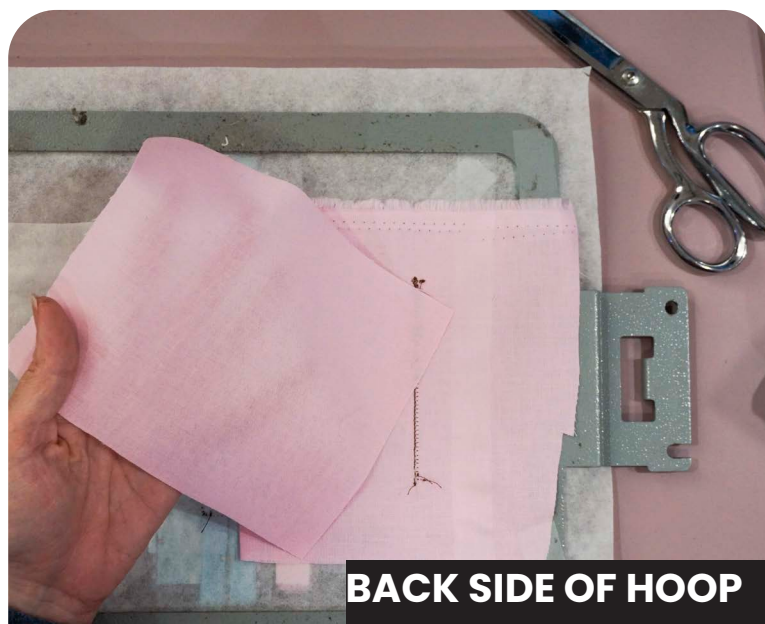


BACK SIDE OF HOOP

FLIP THE HOOP TO THE BACKSIDE. CUT A GENEROUS PIECE OF LINER FABRIC TO COVER THE OVERALL WALL ON THE BACKSIDE OF THE HOOP



BACK SIDE OF HOOP

TAPE IN PLACE WELL

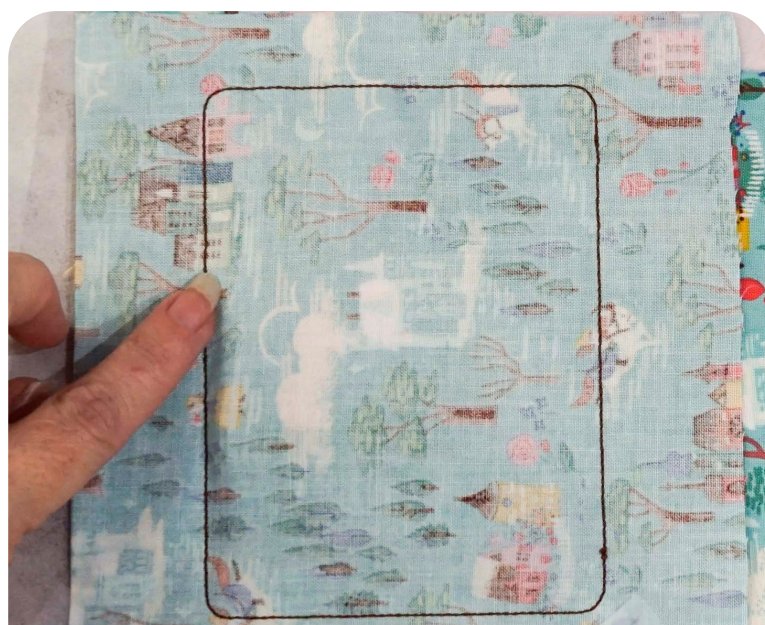

STITCH THE FINAL TACK DOWN LINE







REMOVE THE WALLET FROM THE HOOP



TRIM AROUND THE WALLET WITH PINKING SHEARS LOOKING AT THE LINER SIDE AND LEAVE A LARGE TAB OF FABRIC AT THE OPEN BOTTOM.

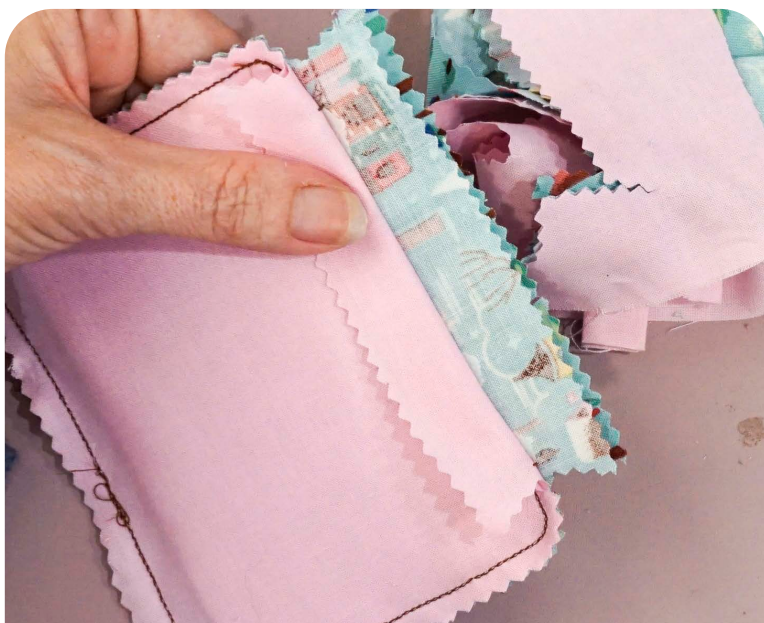


FOLD THE TWO LINER PIECES AS SHOWN....

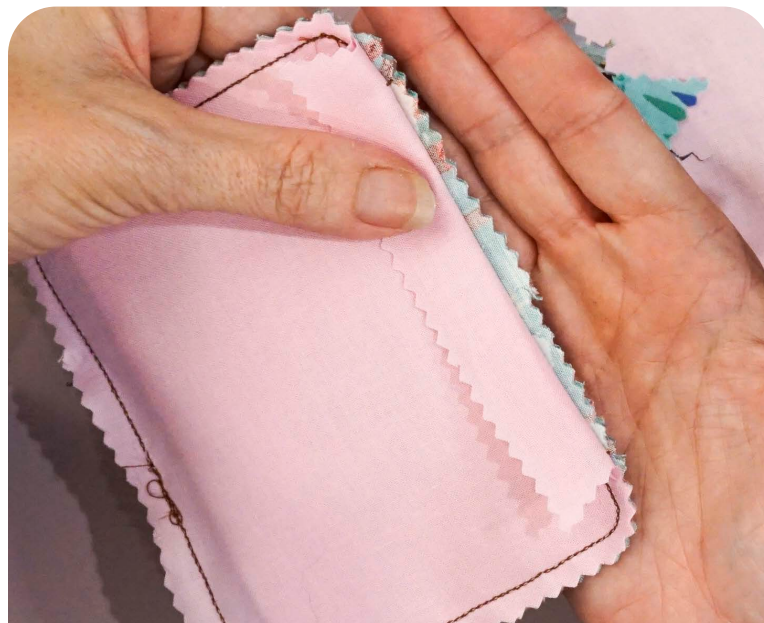

AND TRIM THE EXTERIOR FABRIC CLOSE AS SHOWN.




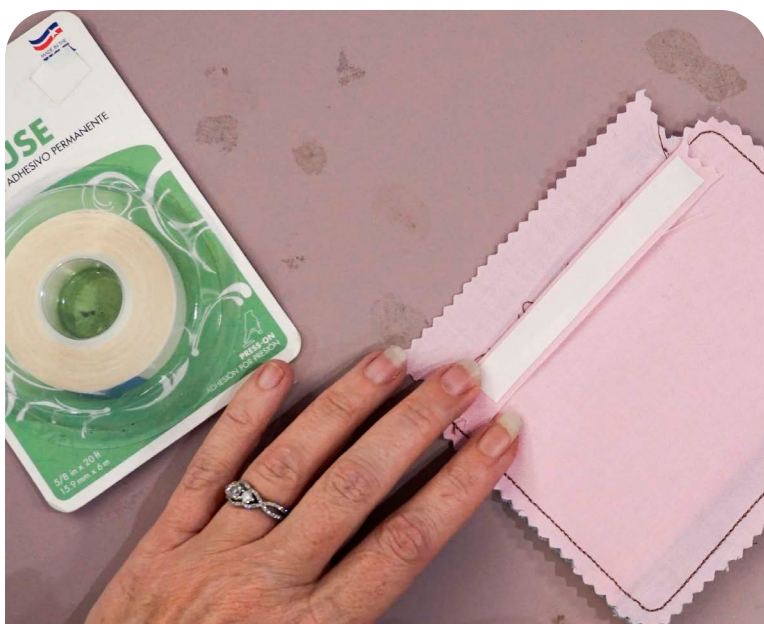


APPLY A PIECE OF SEAM TAPE (DOUBLE ADHESIVE) ON THE INSIDE OF ONE OF THE LINER FLAPS.



TURN THE WALLET RIGHT SIDE OUT AND THEN TUCK THE LINER TABS INSIDE.

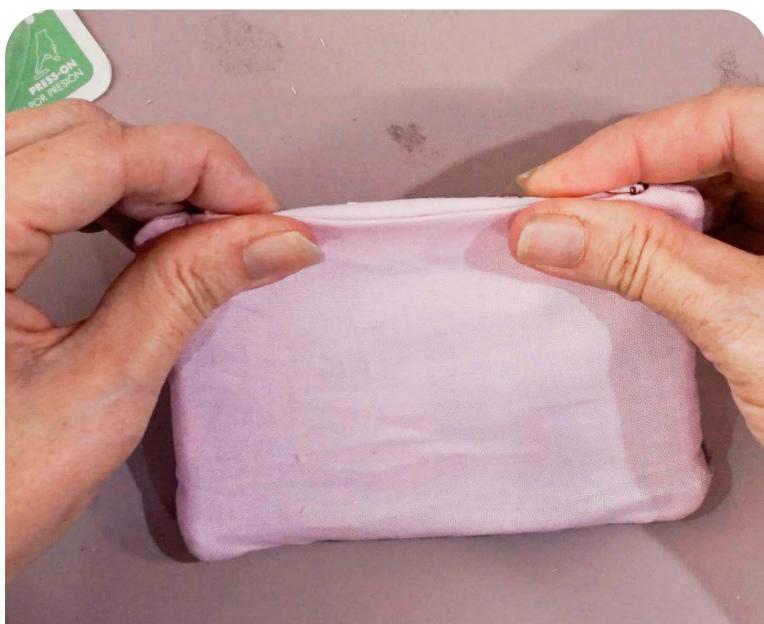

PEEL OFF THE PAPER BACKING AND ADHERE THE OPENING CLOSED.

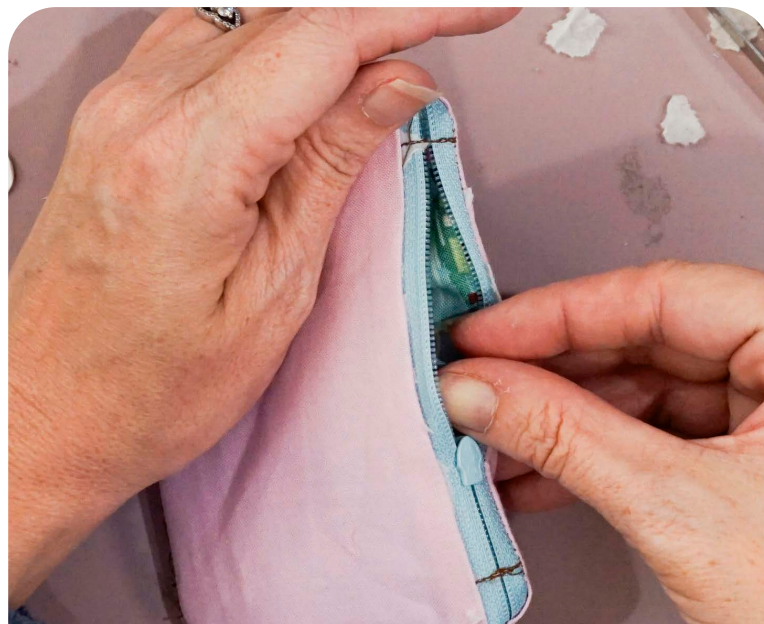

LOCATE THE ZIPPER AND UNZIP IT ALL THE WAY





TURN THE WALLET RIGHT SIDE OUT AGAIN AND USE A BLUNT OBJECT TO SMOOTH THE CORNERS.



HERE IS THE WALLET ALL TURNED. IRON IT CAREFULLY.




USE AN AWL TO PIERCE A HOLE AND INSTALL A KAM SNAP ON THE TAB.






US USE AN AWL TO PIERCE A HOLE ON THE CARD HOLDER IN THE EDGE OF THE SECOND CARD SLOT.

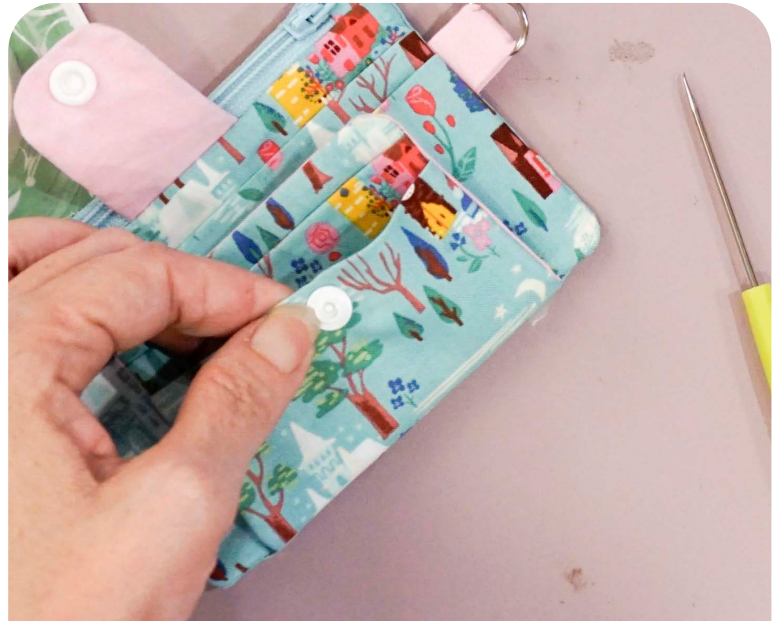

INSTALL A KAM SNAP.

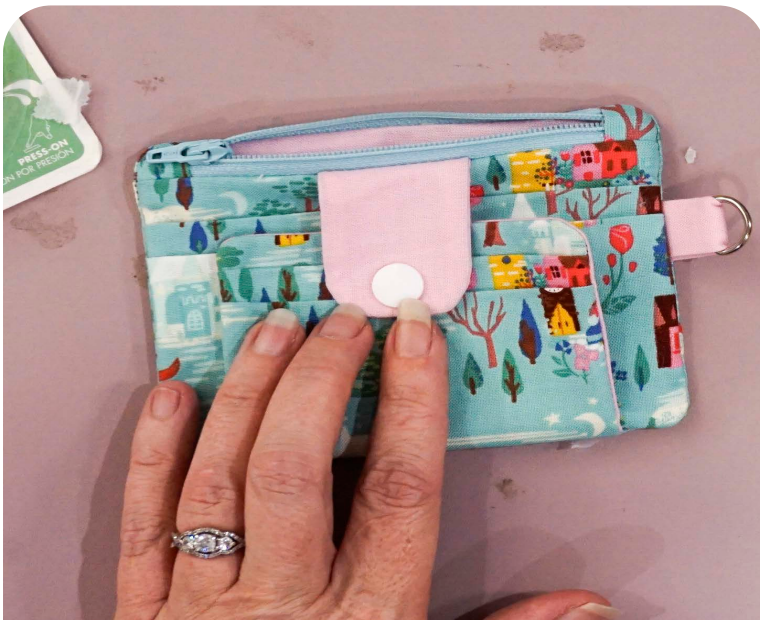

NOW THE WALLET CAN BE SNAPPED CLOSED!
YOU ARE ALL DONE!

